Manualslib.com - The Global Manuals Library

SONY XBR-75X940D REFERENCE MANUAL

Quick Links

Securing the Tv
Parts and Controls
Connection Diagram
Detaching the Table-Top Stand from
Troubles and Solutions
Troubleshooting

Table of Contents

Table of Contents
IMPORTANT NOTICE
Safety information
securing the tv
preventing the tv from toppling
before setting up your tv
Precautions
supported formats
Controls and Indicators
Remote Control Parts Description
Using the optional Wall-Mount
XBR-65/55X930D only
Using the optional Wall-Mount
Bracket
Detaching the Table-Top Stand from
the TV
Troubles and Solutions
important safety instructions
magnetic influence
volume adjustment
child safety
Other ManualsLib Projects

SONY

Television
Téléviseur

Reference Guide US

Manuel de référence FR

Sony Customer Support

U.S.A.:
http://www.sony.com/tvsupport
Canada:
http://www.sony.ca/support

United States	Canada
1.800.222.SONY	1.877.899.SONY

Please Do Not Return the Product to the Store

Service à la clientèle Sony

Canada :
http://support.sony.ca/fr
États-Unis :
http://www.sony.com/tvsupport

Canada	États-Unis
1.877.899.SONY	1.800.222.SONY

Ne retournez pas le produit au magasin

BRAVIA

XBR-75X940D / 75X850D / 65X930D / 65X850D / 55X930D / 55X850D

Table of Contents

IMPORTANT NOTICE 2
Safety information 3
Precautions 7
Parts and Controls 9
Controls and Indicators 9
Using Remote Control 10
Remote Control Parts Description 10
Connection Diagram 12
Installing the TV to the Wall 15
Using the optional Wall-Mount Bracket (XBR-75X940D, XBR-65/55X930D only) 15
Using the optional Wall-Mount Bracket 17
Detaching the Table-Top Stand from the TV 20
Installing the TV against a wall or enclosed area 21
Troubleshooting 22
Troubles and Solutions 22
Specifications 23

Introduction

Thank you for choosing this Sony product.
Before operating the TV, please read this manual thoroughly and retain it for future reference.

Note

- Images and illustrations used in the Setup Guide and this manual are for reference only and may differ from the actual product.

The 75" class has a 74.5 inch (189.3cm) viewable image size, the 65" class has a 64.5 inch (163.9 cm) viewable image size and the 55" class has a 54.6 inch (138.8 cm) viewable image size (measured diagonally).

Location of the Setup Guide

Setup Guide is placed on top of the cushion inside the TV carton.

Help Guide

Help Guide explains the information on how to use the TV's features. To display Help Guide on the TV, press **HELP** on the remote control and select [Help Guide].

Location of the identification label

Labels for the TV Model No. and Power Supply rating are located on the rear of the TV.
For models with supplied AC adapter:
Labels for the AC adapter Model No. and Serial No. are located on the bottom of the AC adapter.

IMPORTANT NOTICE

Owner's Record

The model and serial numbers are located at the side and rear of the TV. Record these numbers in the spaces provided below. Refer to them whenever you call upon your Sony dealer regarding this TV.

Model Name

_____

Serial No.

_____

CAUTION

To prevent electric shock and blade exposure, do not use this AC plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted.

- Operate the TV only on 110 V - 240 V AC (U.S.A./Canada 120 V AC) (except models with supplied AC adapter)
  Operate the TV only on DC 24 V (with AC adapter) (XBR-65/55X930D only)
  Operate the TV only on DC 19.5 V (with AC adapter) (XBR-55X850D only)

(3D compatible models only)

- Some people may experience discomfort (such as eye strain, fatigue, or nausea) while watching 3D video images or playing stereoscopic 3D games. Sony recommends that all viewers take regular breaks while watching 3D video images or playing stereoscopic 3D games. The length and frequency of necessary breaks will vary from person to person. You must decide what works best. If you experience any discomfort, you should stop watching the 3D video images or playing stereoscopic 3D games until the discomfort ends; consult a doctor if you believe necessary. You should also review (i) the instruction manual of any other device or media used with this television and (ii) our website (http://www.sony.com/tvsupport) for the latest information. The vision of young children (especially those under six years old) is still under development. Consult your doctor (such as a pediatrician or eye doctor) before allowing young children to watch 3D video images or play stereoscopic 3D games. Adults should supervise young children to ensure they follow the recommendations listed above.
- Do not use, store, or leave the 3D Glasses or battery near a fire, or in places with a high temperature, e.g., in direct sunlight, or in sun-heated cars.

Note

This television includes a QAM demodulator which should allow you to receive unscrambled digital cable television programming via subscription service to a cable service provider. Availability of digital cable television programming in your area depends on the type of programming and signal provided by your cable service provider.

Safety information

Declaration of Conformity

Trade Name: SONY
Model: XBR-75X940D/XBR-75X850D/XBR-65X930D/
XBR-65X850D/XBR-55X930D/XBR-55X850D
Responsible Party: Sony Electronics Inc.
Address: 16535 Via Esprillo,
San Diego, CA 92127 U.S.A.
Telephone Number: 858-942-2230

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Related Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Pursuant to FCC regulations, you are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Safety and Regulatory

This device complies with Industry Canada's licence-exempt RSSs. Operation is subject to the following two conditions:
(1) This device may not cause interference; and
(2) This device must accept any interference, including interference that may cause undesired operation of the device.

To prevent radio interference to the licensed service, this device is intended to be operated indoors and away from windows to provide maximum shielding. Equipment (or its transmit antenna) that is installed outdoors is subject to licensing.

Only use Wireless LAN indoors when using it with IEEE 802.11a (5 GHz).

This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment should be installed and operated keeping the radiator at least 20cm or more away from person's body (excluding extremities: hands, wrists, feet and ankles).

This device and its antenna(s) must not be co-located or operating with any other antenna or transmitter except Grant condition.

WARNING

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

— Using cabinets or stands recommended by the manufacturer of the television set.
— Only using furniture that can safely support the television set.
— Ensuring the television set is not overhanging the edge of the supporting furniture.
— Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
— Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
— Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

NOTE ON AC ADAPTER (models with supplied AC adapter only)

Warning

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
To prevent fire or shock hazard, do not place objects filled with liquids, such as vases, on the apparatus.
Do not install this equipment in a confined space, such as a bookshelf or similar unit.

- Please ensure that the AC power outlet is installed near the equipment and shall be easily accessible.
- Be sure to use the supplied AC adapter and AC power cord. Otherwise it may cause a malfunction.
- Connect the AC adapter to an easily accessible AC power outlet.

• Do not coil the AC power cord around the AC adapter. The core wire may be cut and/or it may cause a malfunction of the TV.

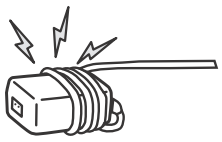

• Do not touch the AC adapter with wet hands.
• If you notice an abnormality in the AC adapter, disconnect it from the AC power outlet immediately.
• The set is not disconnected from the AC source as long as it is connected to the AC power outlet, even if the set itself has been turned off.
• As the AC adapter will become warm when it is used for a long time, you may feel hot when touching it by hand.

Compatible Wall-Mount Bracket Information (XBR-75X940D, XBR-65/55X930D only)

Use the following Sony Wall-Mount Bracket with your TV model.

	Sony TV Model No.
	XBR-75X940D/XBR-65X930D/ XBR-55X930D
Sony Wall-Mount Bracket Model No.	SU-WL810

Use with other Wall-Mount Brackets* may cause instability and could result in property damage or injury.

* For instructions on using the Wall-Mount bracket with your TV please go to http://esupport.sony.com for your TV model and download "Additional Information for Using Sony Wall-Mount Bracket".

To Customers (XBR-75X940D, XBR-65/55X930D only)

Sufficient expertise is required for TV installations. Be sure to subcontract the installation to a Sony dealer or licensed contractor and pay adequate attention to safety during the installation.

Before setting up your TV

Some TV models are packaged with a detached Table-Top Stand so you can mount your TV to a wall right away. See page 15 (Installing the TV to the Wall) if you want to mount the TV to a wall. If you are not mounting the TV to a wall, you will need to attach the Table-Top Stand. You will need a Phillips screwdriver (not supplied) and the supplied screws to complete the task. Look for the Setup Guide.
Be sure to consider the following while setting up your TV:
• Disconnect all cables when carrying the TV.
• Carry the TV with the adequate number of people; larger size TVs require two or more people.
• Correct hand placement while carrying the TV is very important for safety and to avoid damage.

XBR-75X940D, XBR-65/55X930D only

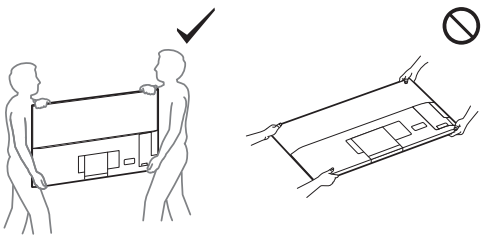

Except XBR-75X940D, XBR-65/55X930D

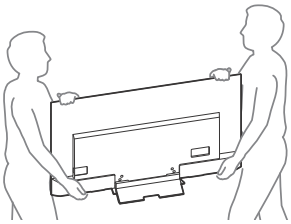

• When handling or mounting the TV set, do not lay down the TV. (XBR-75X940D, XBR-65/55X930D only)

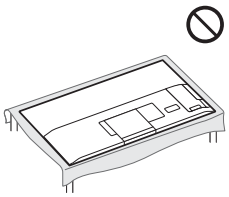

• Ensure your TV has adequate ventilation, see page 21.
• For best picture quality, do not expose the screen to direct illumination or sunlight.
• Avoid installing the TV in a room with reflective wall and floor materials.
• Avoid moving the TV from a cold area to a warm area. Sudden room temperature changes may cause moisture condensation. This may cause the TV to show poor picture and/or poor color. Should this occur, allow moisture to evaporate completely before powering the TV on.

Securing the TV

Sony strongly recommends taking measures to prevent the TV from toppling over.
Unsecured TVs may topple and result in property damage, serious bodily injury or even death.

Preventing the TV from Toppling

• Secure the TV to a wall and/or stand.
• Do not allow children to play or climb on furniture and TV sets.
• Avoid placing or hanging items on the TV.
• Never install the TV on:
  — slippery, unstable and/or uneven surfaces.
  — furniture that can easily be used as steps, such as a chest of drawers.
• Install the TV where it cannot be pulled, pushed, or knocked over.
• Route all AC power cords and connecting cables so that they are not accessible to curious children.

Recommended Measures to Secure the TV

Consider the following measures when securing your TV to a Stand (not supplied).

1 Secure the Stand for the TV.

Make sure the Stand can adequately support the weight of the TV. Use two angle braces (not supplied) to secure the stand. For each angle brace use the appropriate hardware to:

- Attach one side of the angle brace to the wall stud.
- Attach the other side to the Stand.

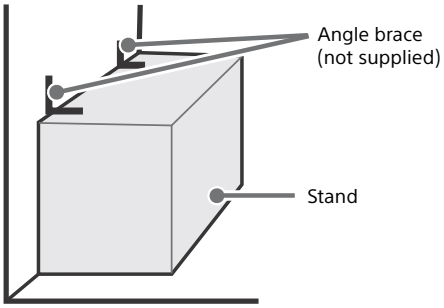

2 Remove the stand cover and terminal cover. (XBR-75X940D, XBR-65/55X930D only)

XBR-75X940D

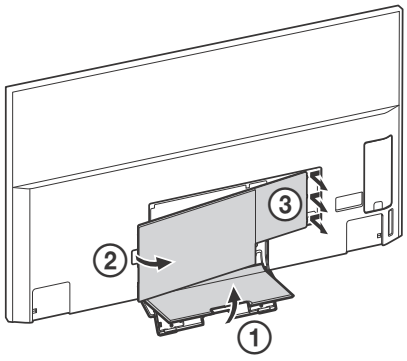

XBR-65/55X930D

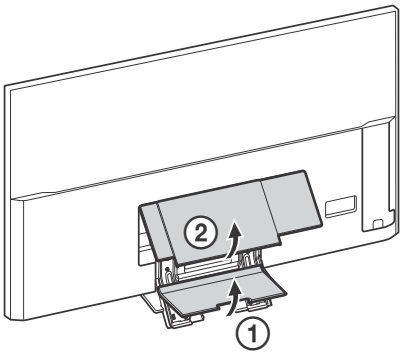

3 Secure the TV to the Stand.

Use the optional hardware listed as follows (not supplied):

- M6 eye bolt (screwed into the TV's rear cover). (XBR-75X940D, XBR-65/55X930D only)
- M6 machine screws (screwed into the TV's rear cover). (Except XBR-75X940D, XBR-65/55X930D)
- A screw or similar (attach it to the Stand).
- Rope or chain (strong enough to support the weight of the TV). Make sure that there is no excess slack in the rope or chain.

XBR-75X940D, XBR-65/55X930D

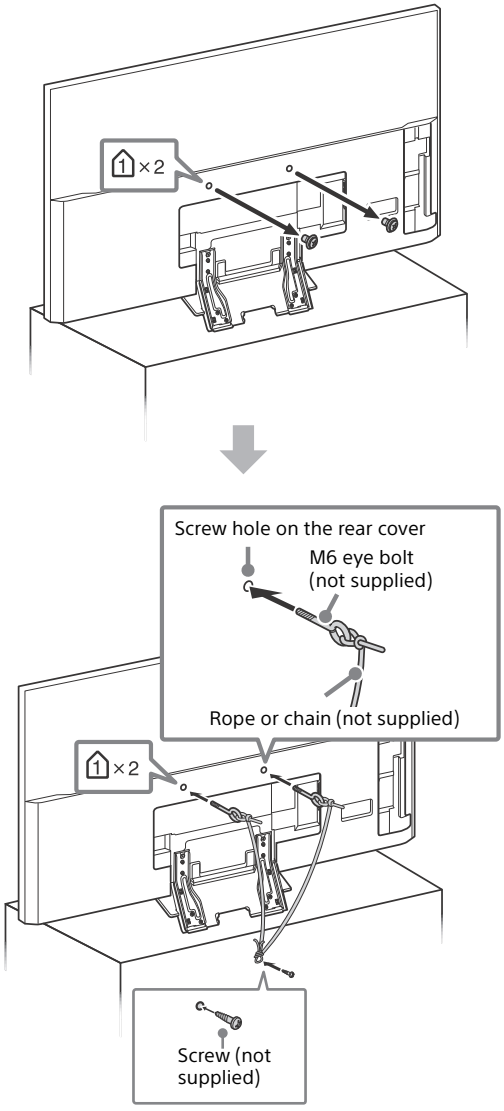

The length of the M6 eye bolt differs depending on the rope or chain diameter. Please see below illustration.

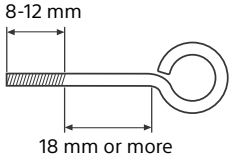

US

XBR-75/65X850D

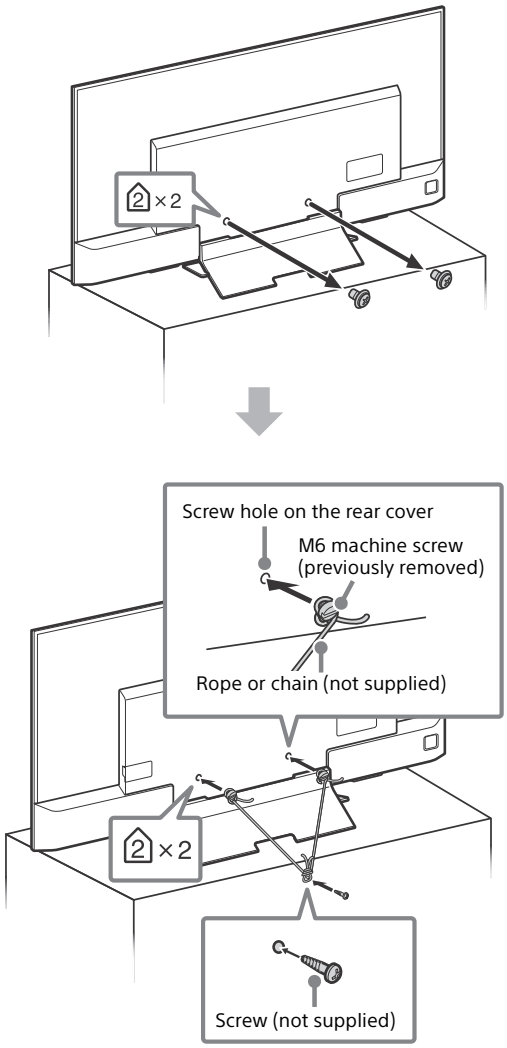

XBR-55X850D

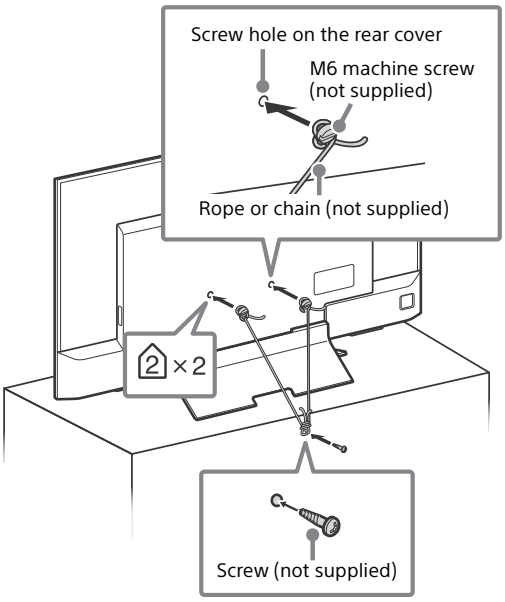

The length of the M6 machine screw differs depending on the rope or chain diameter. Please see below illustration.

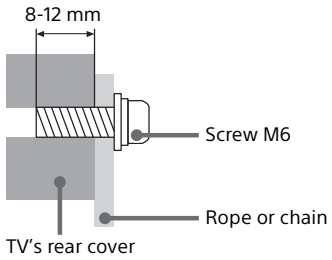

4 Anchor the TV to the wall by using bolts, wall anchor and chain (or rope).

XBR-75X940D, XBR-65/55X930D only

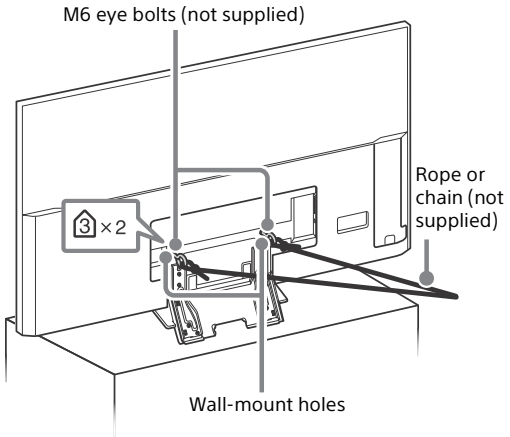

Except XBR-75X940D, XBR-65/55X930D

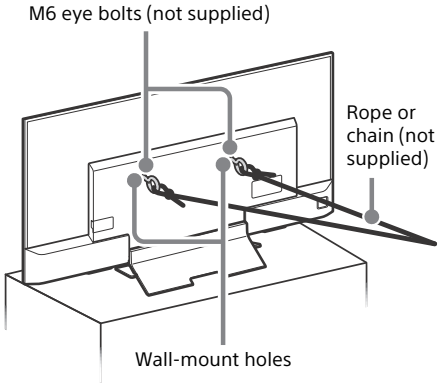

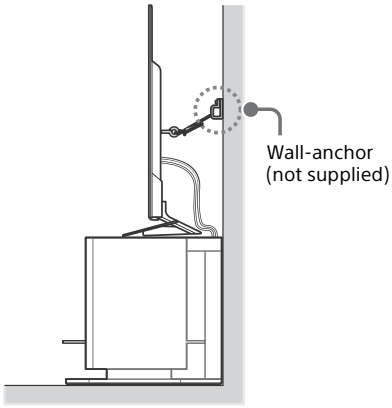

Please see below illustration for M6 eye bolt length.

XBR-75X940D, XBR-65/55X930D only

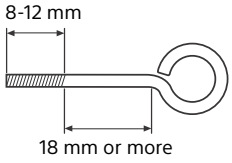

Except XBR-75X940D, XBR-65/55X930D

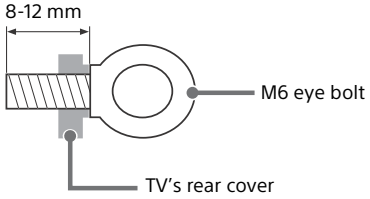

Note

- Your TV is shipped with screws attached to the rear of the TV depending on the TV model. (They are fastened in the screw holes for wall mounting.) Be sure to remove the upper two screws prior to anchoring the TV to a wall.
- Securing the TV to the stand without securing the TV and the stand to the wall provides minimum protection against the TV toppling over. For further protection, be sure to follow the three measures recommended.

Precautions

How to care for your BRAVIA TV

Safety is very important. Please read and follow the safety documentation (Safety Booklet) separately provided.

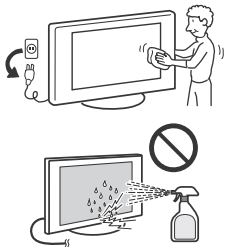

Unplug the TV and other connected equipment from the wall outlet before you begin cleaning your TV.

- Wipe the LCD screen gently with a soft cloth.
- Stubborn stains may be removed with a cloth slightly moistened with a solution of mild soap and warm water.
- If using a chemically pretreated cloth, please follow the instruction provided on the package.
- Never spray water or detergent directly on the TV set. It may drip to the bottom of the screen or exterior parts and enter the TV set, and may cause damage to the TV set.
- Never use strong solvents such as a thinner, alcohol or benzine for cleaning.
- Do not plug in the TV into the wall outlet until the moisture from cleaning has evaporated.
- Do not touch the TV if your hand is covered in any chemical substance such as hand cream or sunblock.

The TV should also be placed on a stable surface to prevent it from toppling over (see page 4). If you have young children or pets at home, check regularly to ensure the TV is securely fastened.

Recommendation for an F type plug

Projection of the inner wire from the connection part must be less than 1.5 mm.



(Reference drawing for an F type plug)

US

The BRAVIA® 4K TV Experience

Thank you for choosing Sony! Your new BRAVIA® TV opens the door to the "4K TV Experience." This document will help you get the most out of your TV. Please take a moment to register your TV at:
U.S.A.: http://productregistration.sony.com
Canada: http://www.sony.ca/registration

Four Steps to a 4K TV Experience

Set, Source, Sound, and Setup.

1 Set

Now that you have made the best selection in LED backlit LCD TV technology, be sure to remove all of the accessories from the packaging before setting up your TV.

2 Source

To experience the stunning detail of your **BRAVIA** TV, you need access to HD programming.

- Upgrade your signal or content source to high-definition (4K) by contacting your HD service provider.
- Bring the astonishing resolution of your Sony 4K Ultra HD TV to life with Sony 4K Ultra HD Media Player. (The availability depends on region)
- Receive over-the-air HD broadcasts with an HD-quality antenna connected directly to the back of your TV.
  Visit **http://www.antennaweb.org** for more information on antenna selection and setup.
- Discover the wealth of entertainment now available on super-high resolution Blu-ray Disc™ player and other Sony HD equipment.

3 Sound

Complete the high-definition experience with a **BRAVIA** Sync™ surround sound system or A/V receiver from Sony.

4 Setup

Install your TV and connect your sources. See page 12 for sample connection diagrams. To help assure the highest quality for your 4K experience, use Sony HDMI (High-Definition Multimedia Interface) cables.

To learn more about 4K TV, visit:

U.S.A.: http://www.sony.com/HDTV
Canada: http://www.sony.ca/hdtv

This TV displays all video input signals in a resolution of 3,840 dots × 2,160 lines.

The following chart shows the high-definition (HD) and standard-definition (SD) video formats supported by your **BRAVIA** TV inputs.

	INPUT	VIDEO	AUDIO	SUPPORTED FORMATS								
				4K*1	1080/ 24p/30p	1080p*1	1080i	720/ 24p/30p	720p*1	480p	480i	PC*2
4K/ HD	HDMI			✓	✓	✓	✓	✓	✓	✓	✓	✓
	COMPONENT	Y P_B P_R	Audio L/R			✓	✓		✓	✓	✓	
SD	VIDEO	Composite video connection	Audio L/R								✓	

*1 For details of supported formats, refer to the "Specifications" in this manual.

*2 For supported PC formats refer to the Help Guide.

Parts and Controls

Controls and Indicators

XBR-75X940D, XBR-65/55X930D only

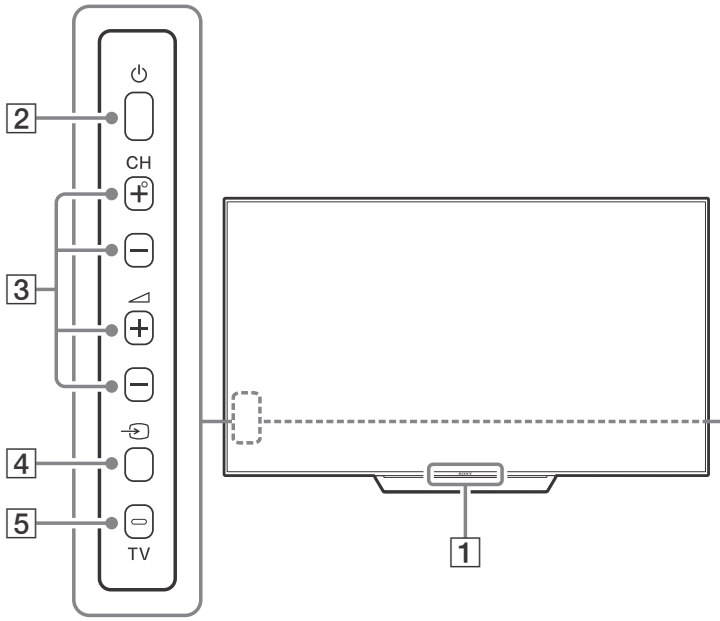

Except XBR-75X940D, XBR-65/55X930D

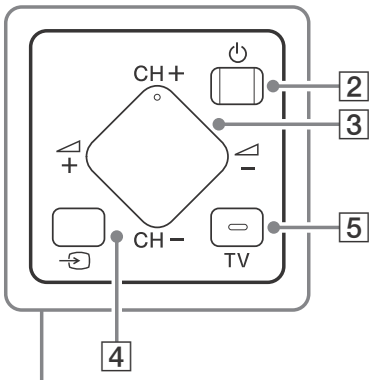

US

1 Remote Control sensor*1 / Light sensor*1 / Illumination LED / 3D Sync Transmitter*1*2

The illumination LED lights up or blinks according to the status of the TV.

- White
  When turning on the TV/picture off mode/software update, etc.
- Cyan
  When connecting with a mobile device wirelessly.
- Amber
  Timer is set.

2 ⏻ (Power)

3 CH +/- (Channel)
⊿ +/- (Volume)

4 ⏎ (Input select)
Display and select the input source.

5 TV
Switch to a TV channel or input from other applications.

*1 Do not place anything near the sensor.
*2 Only on limited region/country/TV model.

Using Remote Control

Remote Control Parts Description

The remote control shape, location, availability and function of remote control button may vary depending on your region/country/TV model.

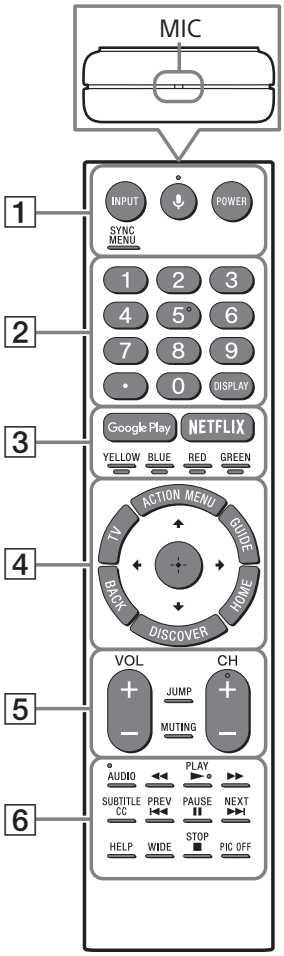

1 INPUT

Display and select the input source.

(Microphone)

Use Voice Function. (e.g., Search various content by voice.)

POWER

Turn on or turn off the TV (standby mode).

SYNC MENU

Display the BRAVIA Sync Menu.

2 Number buttons

Use with the 0-9 buttons to select digital channels.

DISPLAY

Display information about the channel/ program/input you are viewing.

3 Google Play

Access the “Google Play” online service.

NETFLIX (Only on limited region/ country/TV model)

Access the “NETFLIX” online service.

Color buttons
Execute corresponding function at that time.

4 **ACTION MENU**
Display a list of contextual functions.

TV
- Switch to a TV channel or input from other applications.
- Turn on the TV to display TV channel or input.

GUIDE
Display the digital program guide.

BACK
Return to previous screen.

HOME
Display the TV Home Menu.

DISCOVER
Bring up the Content Bar to search for content.

↑/↓/←/→/⊕ (Item select/Enter)

5 **VOL +/– (Volume)**
Adjust the volume.

JUMP
Jump back and forth between two channels or inputs. The TV alternates between the current channel or input and the last channel or input that was selected.

MUTING
Mute the sound. Press again to restore the sound.

CH +/– (Channel)
Select the channel.

6 **AUDIO**
Change the language for the program currently being viewed.

◀◀/►/►►/I◀◀/❚❚/►►I/■
Operate media contents on TV and connected BRAVIA Sync-compatible device.

SUBTITLE/CC
Turn subtitles on or off (when the feature is available).

HELP
Display Help Menu. Help Guide can be accessed from here.

WIDE
Change the screen format.

PIC OFF
Turn the picture off, while sound remains on.

US

Guidelines for IR Remote Control

- Point your remote control directly at the IR sensor located on your TV.
- Make sure that no objects are blocking the path between the remote control and the IR sensor on your TV.

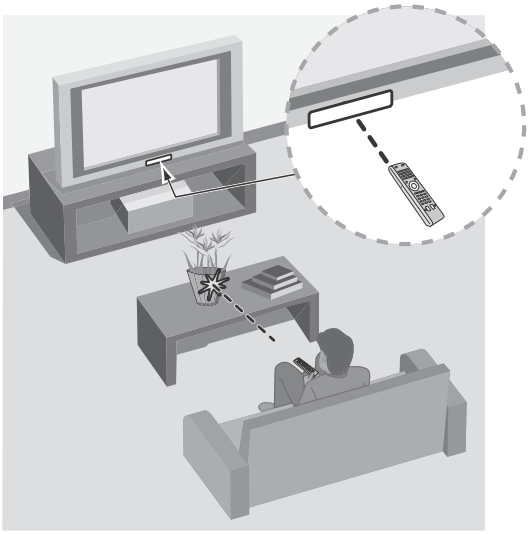

- Fluorescent lamps can interfere with your remote control; try turning off the fluorescent lamps.
- If you are having problems with the remote control, reinsert or replace your batteries and make sure that they are correctly inserted.

Connection Diagram

For more information on connections, refer to the Help Guide (page 2).

Note

- When connecting the cable to the Cable/Antenna, input finger tighten only, over tightening the connection can damage the TV.

XBR-75X940D, XBR-75X850D, XBR-65/55X930D only

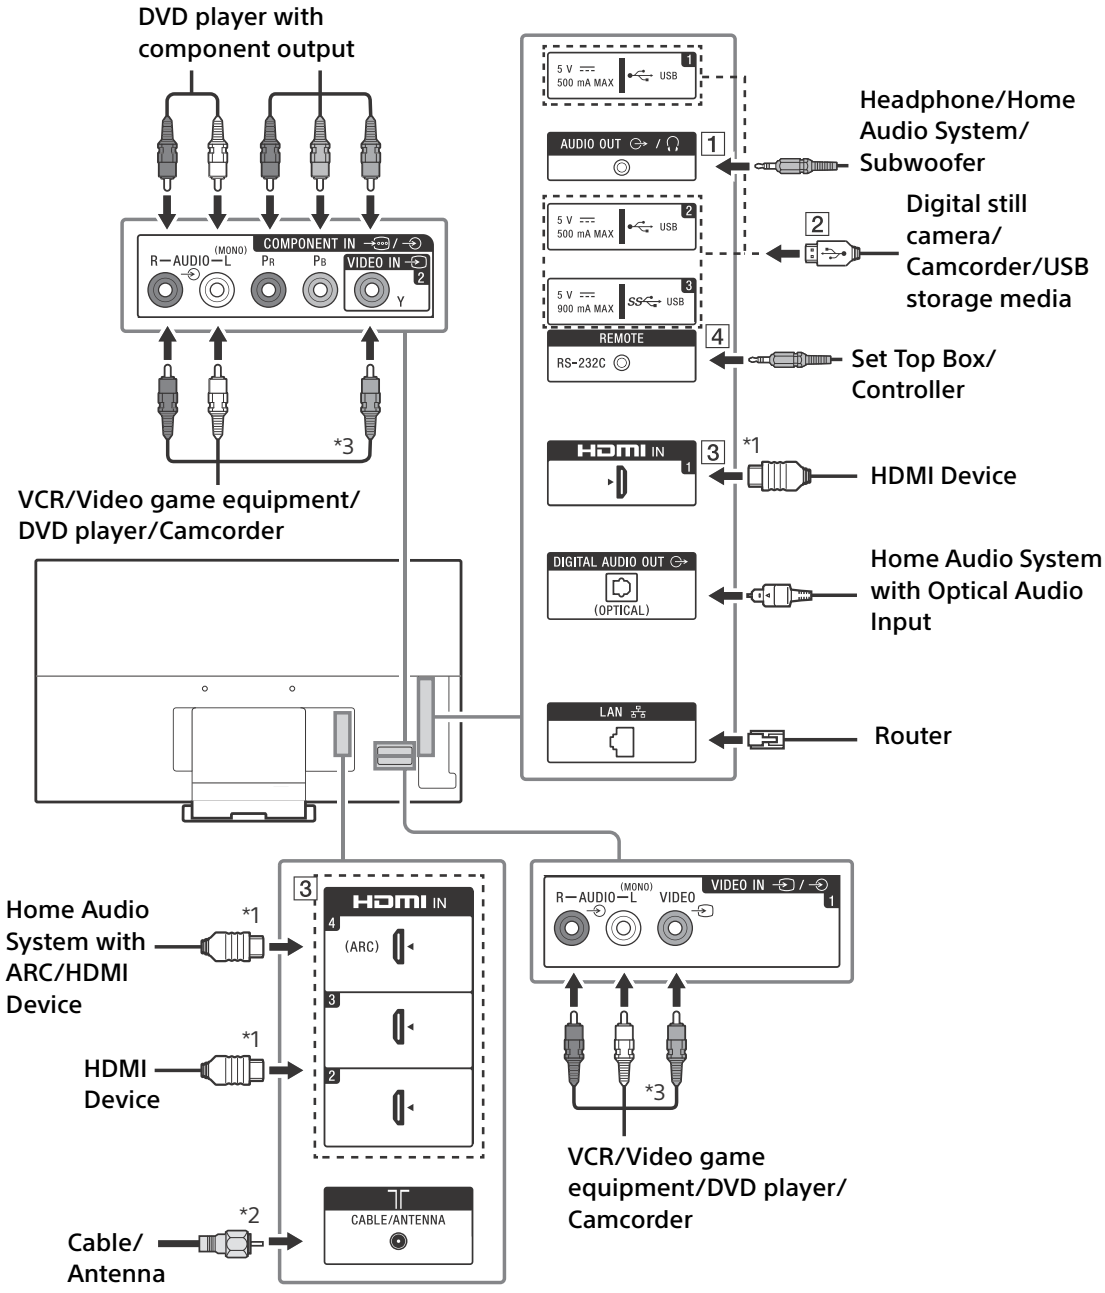

Except XBR-75X940D, XBR-75X850D, XBR-65/55X930D

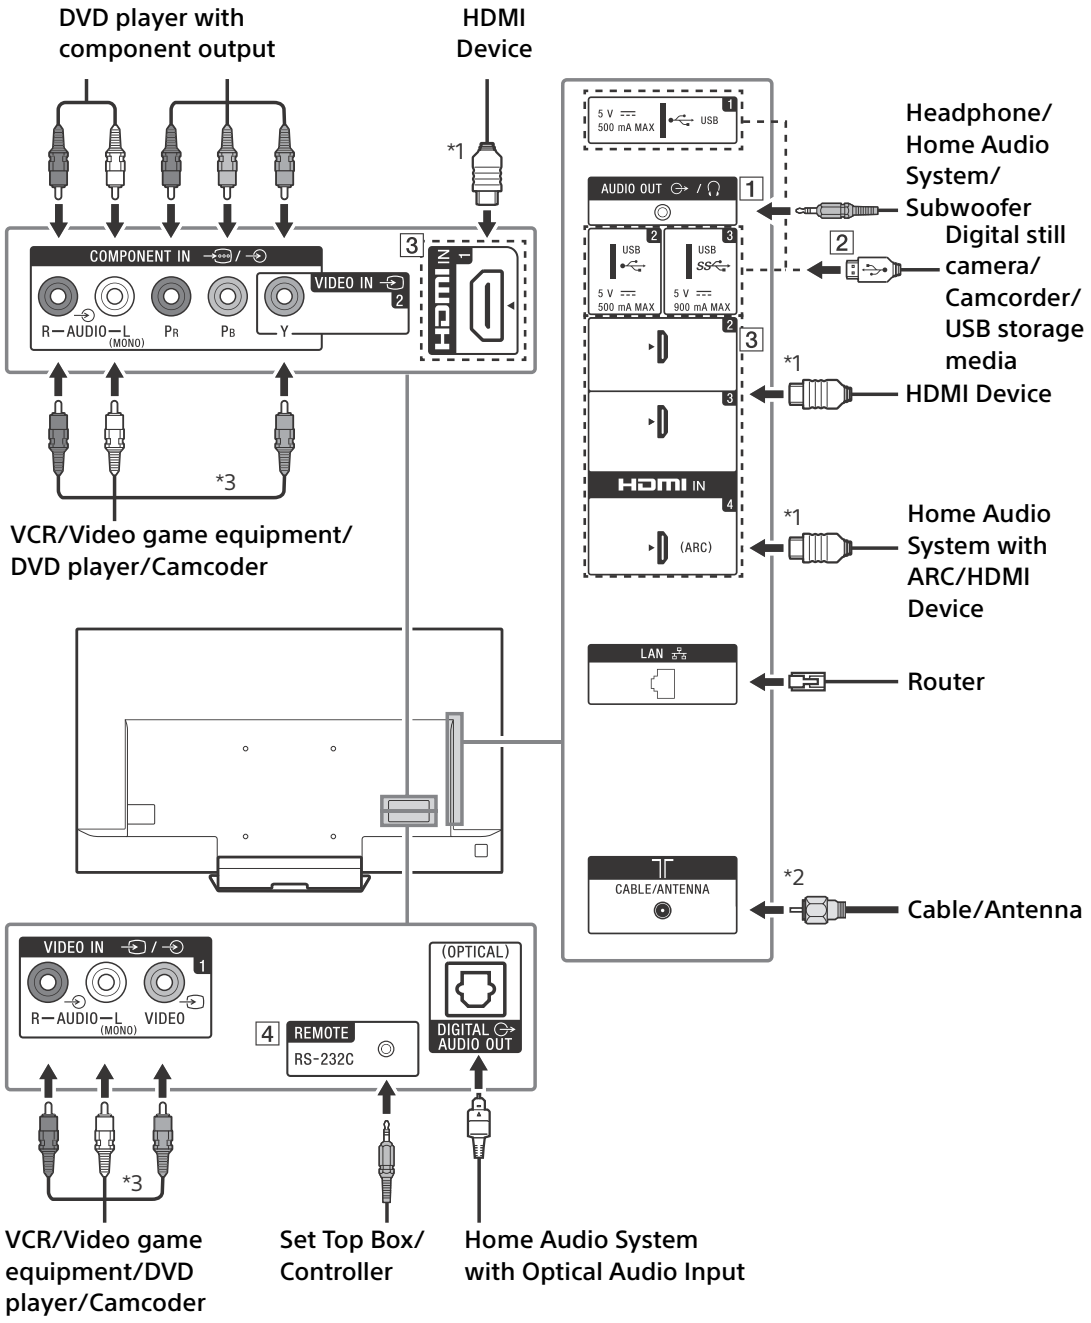

US

1 AUDIO OUT*4 /

- To listen to the TV's sound through the connected equipment, press **HOME**. Select [Settings] → [Sound] → [Headphone/Audio out] and then select the desired item.

2 USB 1/2, SS USB 3

- Connecting a large USB device may interfere with other connected devices beside it.
- When connecting a large USB device, connect to the USB 1 port.

3 HDMI IN 1/2/3/4

- If connecting a digital audio system that is compatible with Audio Return Channel (ARC) technology, use HDMI IN 4. If not, an additional connection with DIGITAL AUDIO OUT (OPTICAL) is necessary.

4 REMOTE RS-232C

- This jack is for receiving the external control signal. Enables extended control of the TV using RS-232C via the RS-232C jack.
  RS-232C: connect to the RS-232C terminal of the home controller.
- Take care to not connect to headphones or an external audio system.
- If [RS232C control] is set to [On], [BRAVIA Sync settings] is not available.

*1

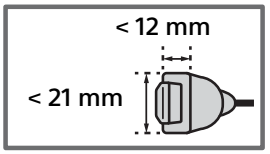

*2

*3 When connecting mono equipment, connect to the L (MONO) audio jack (socket).

*4 Supports 3-pole stereo mini jack only.

Installing the TV to the Wall

Using the optional Wall-Mount Bracket (XBR-75X940D, XBR-65/55X930D only)

This TV's instruction manual only shows the steps on preparing the installation of the TV before installing to the wall.

Your TV can be mounted on a wall using a Wall-Mount Bracket SU-WL810 (not supplied) out of the box as packaged. If the Table-Top Stand is attached to the TV, the TV may require detaching the Table-Top Stand; see page 20 (Detaching the Table-Top Stand from the TV). Prepare the TV for the Wall-Mount Bracket before making cable connections.

US

For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness. Please see below illustration.

XBR-75X940D only

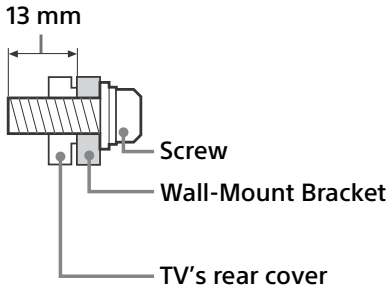

XBR-65/55X930D only

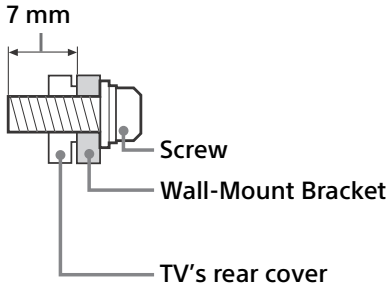

- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

Note

- Read the supplied Safety Booklet for additional safety information.

Refer to the instructions supplied with the Wall-Mount Bracket for your model to install the TV on the wall.

1 Remove the stand cover and terminal covers.

XBR-75X940D

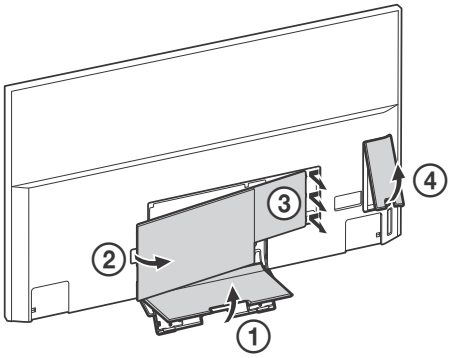

XBR-65/55X930D

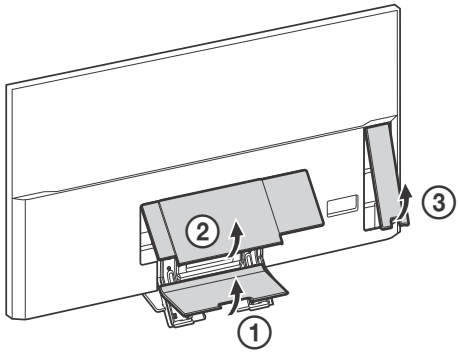

2 Remove the screws from the rear of the TV.

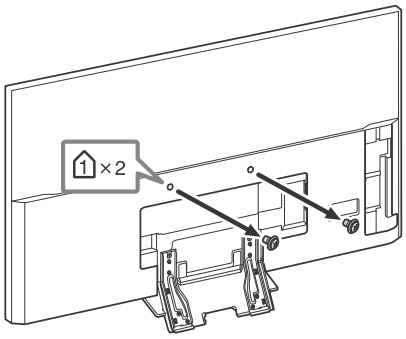

Using the optional Wall-Mount Bracket

This TV's instruction manual only shows the steps on preparing the installation of the TV before installing to the wall.

Your TV can be mounted on a wall using a Wall-Mount Bracket (not supplied) out of the box as packaged. If the Table-Top Stand is attached to the TV, the TV may require detaching the Table-Top Stand; see page 20 (Detaching the Table-Top Stand from the TV).
Prepare the TV for the Wall-Mount Bracket before making cable connections.

US

For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- The length of the screw for Wall-Mount Bracket differs depending on the Wall-Mount Bracket thickness. Please see below illustration.

XBR-75X940D, XBR-65/55X930D only

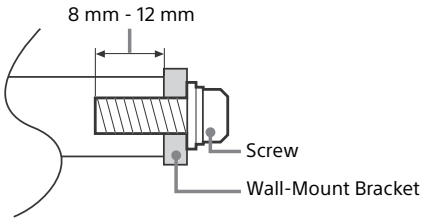

Except XBR-75X940D, XBR-65/55X930D

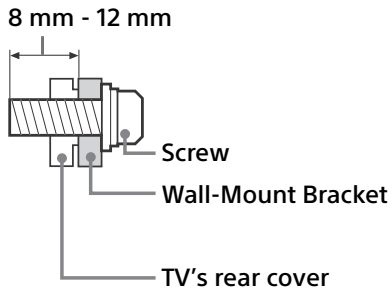

- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand. Keep the screws away from small children.

Note

- Read the supplied Safety Booklet for additional safety information.

XBR-75X940D, XBR-65/55X930D only

1 Remove the stand cover and terminal covers.

XBR-75X940D

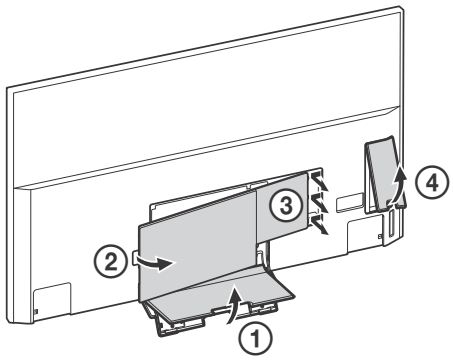

XBR-65/55X930D

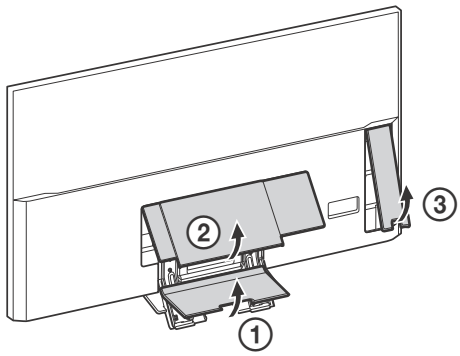

2 Remove the screws from the rear of the TV.

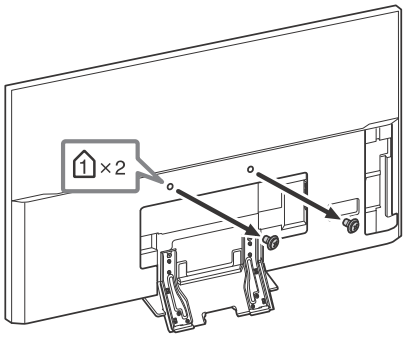

3 Attach the Wall-Mount Attachment (supplied with the TV) to the rear of the TV (to make it parallel with the wall).

XBR-75X940D

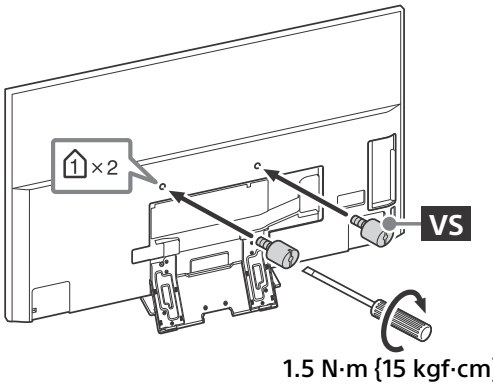

XBR-65/55X930D

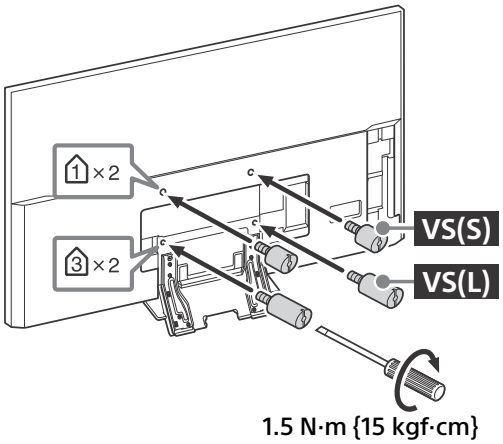

Note

- If using an electric screwdriver, set the torque at approximately 1.5 N·m {15 kgf·cm}.
- Be sure to fasten the Wall-Mount Attachment when attaching them to the TV.
  Use only a flat head screwdriver to install the Wall-Mount Attachment. Use of another tool might result in over torqueing the Wall-Mount Attachment and damaging the TV.

Except XBR-75X940D, XBR-65/55X930D

1 Remove the stand cover. (XBR-75X850D only)

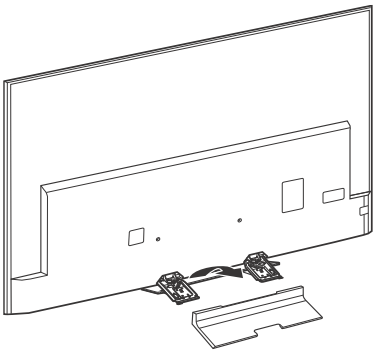

US

2 Remove the screws from the rear of the TV.

XBR-75X850D

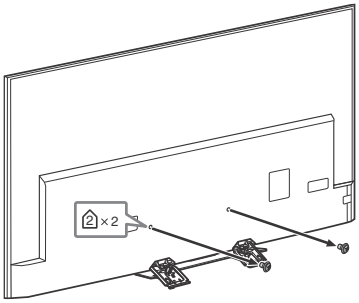

XBR-65X850D

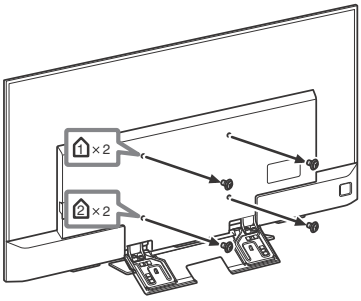

XBR-55X850D

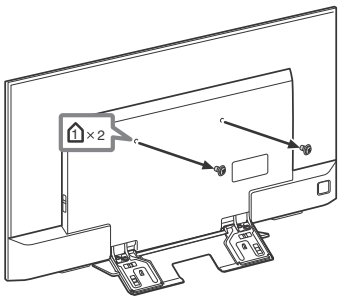

Detaching the Table-Top Stand from the TV

To detach the Table-Top Stand from the TV, remove the screws ⬆.

XBR-75X940D, XBR-65/55X930D only

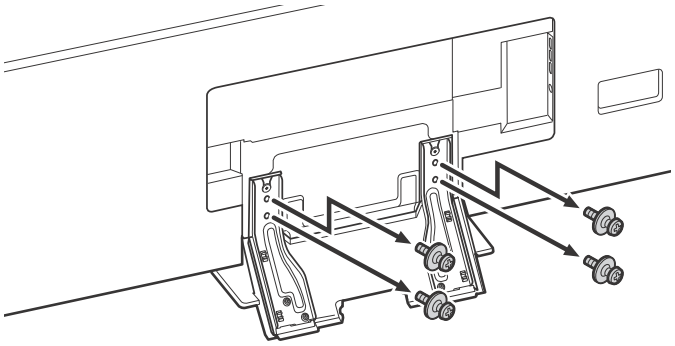

Except XBR-75X940D, XBR-65/55X930D

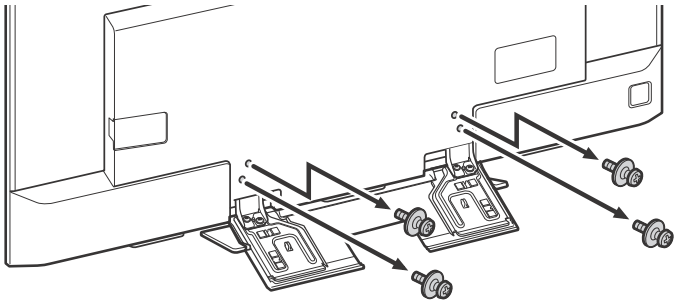

Note

- Do not remove the Table-Top Stand for any reason other than to install corresponding accessories on the TV.
- Be sure the TV is vertical before turning on. To avoid uneven picture uniformity do not power on the TV with the LCD panel facing down.
- When attaching the Table-Top Stand again, be sure to fasten the screws (previously removed) to the original holes on the rear of the TV.

Installing the TV against a wall or enclosed area

Make sure that your TV has adequate ventilation. Allow enough space around the TV as shown in the illustration.

Installed with stand

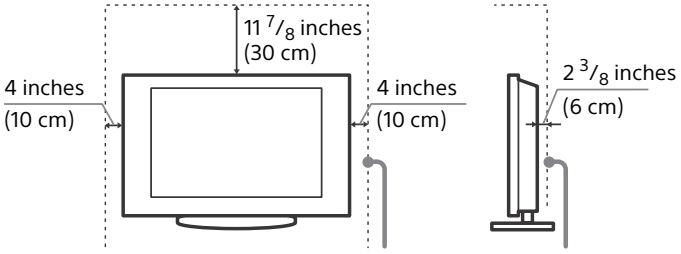

Leave at least this much space around the set.

Installed on the wall

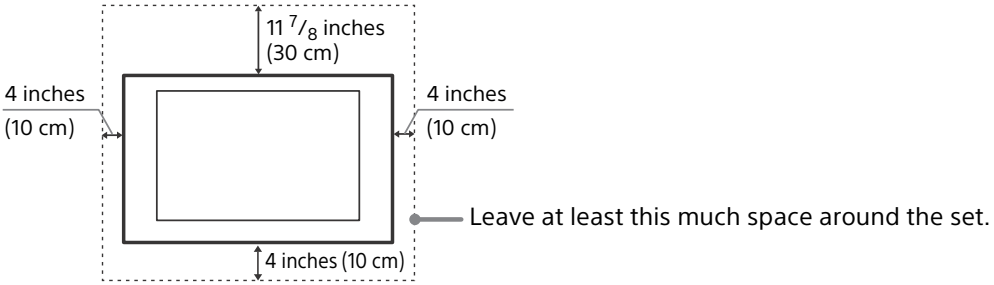

Never install the TV set as follows:

Air circulation is blocked.

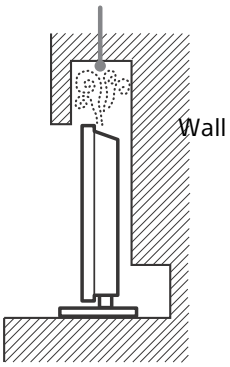

Air circulation is blocked.

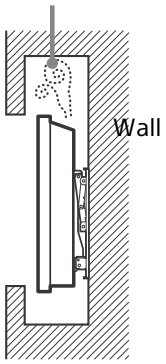

Note

- Inadequate ventilation can lead to overheating of the TV and may cause damage to your TV or cause a fire.

US

Troubleshooting

In order to keep your TV software up-to-date, it is necessary to download the latest software information via the digital broadcasting system or internet and to update the software. Select [Update Now] to start a software update. The illumination LED flashes white while the software is updating.
The following screen with [Updating...] will appear while software is updating.

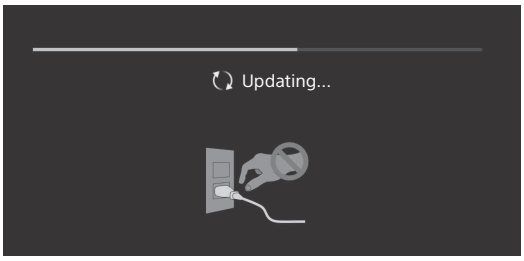

Do not unplug the AC power cord during the software update. If you do, the software update may not finish completely, and it may cause a software malfunction. Software updates can take up to 30 minutes. If you do not wish to update the software automatically, press **HOME** and select [Help] → [System software update] → [Automatic software download] → [Off].

When you plug in TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV, because it takes time to initialize the system. Wait for about one minute, then operate it again. When you turn on by pressing the power button on the remote control or the TV, it takes some time to turn on the illumination LED and for the remote control to be functional.

When the illumination LED is flashing red, count how many times it flashes (interval time is three seconds).
If the illumination LED flashes red, reset the TV by disconnecting the AC power cord from the TV for two minutes, then turn on the TV.
If the problem persists, contact Sony Customer Support (information provided on the front cover) with the number of times the illumination LED flashes red (interval time is three seconds). Disconnect the AC power cord, and contact Sony Customer Support.

When the illumination LED is not flashing, check the items as follows.
You can also refer to troubleshooting in the Help Guide or perform self-diagnosis by selecting [Help] → [Self diagnostics]. If the problem persists, contact Sony Customer Support (information provided on the front cover).

Troubles and Solutions

There is no picture (screen is dark) and no sound.

- Check the cable/antenna connection.
- Connect the TV to AC power, and press the ⏻ button on the TV or **POWER** button on the remote control.

Some programs cannot be tuned.

- Check the cable/antenna connection.

The remote control does not function.

- Replace the batteries.

The [Parental lock] password has been forgotten.

- Enter 4357 for the PIN code. Update PIN code by selecting [Settings] → [Parental lock] → [Change password].

The TV and its surroundings become warm.

- When the TV is used for an extended period of time, the TV and its surroundings may become warm to the touch. This is not a malfunction of the TV.

How to reset the TV to factory settings

- Turn on the TV. You can reset the TV to factory settings by pressing **HOME**, then select [Settings] → [Storage & reset] → [Factory data reset].
  WARNING: The reset will clear all of your customized settings including the [Parental lock] setting.
- For security purposes, be sure to remove all personal and account information before discarding, selling or passing your TV to someone else by: unlinking/unregistering, signing out of and deactivating all network services as well as factory reset the TV.

Frozen audio or video, a blank screen, or the TV does not respond to TV or remote control buttons.

- Perform a simple reset of the TV by unplugging the AC power cord for two minutes, then plug it in again.

The ⏻, CH+/–, ◿ +/–, ⏀ and TV buttons cannot be located on the TV.

- See below illustration for location of the buttons on the TV.

XBR-75X940D, XBR-65/55X930D only

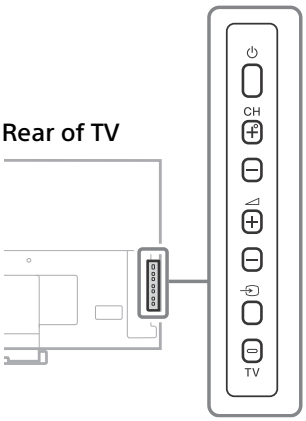

Except XBR-75X940D, XBR-65/55X930D

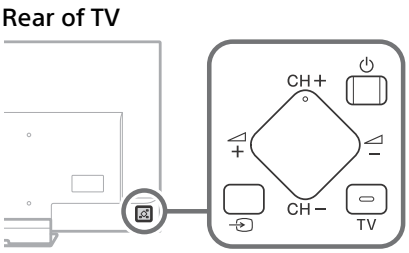

The illumination LED is turned on.

- If you do not wish to light up the illumination LED, you can turn it off.
  Press **HOME**, then select [Settings] ⟶ [Illumination LED] ⟶ [Off].

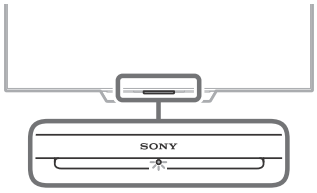

Cannot connect to a wireless router by WPS (Wi-Fi Protected Setup).

- If you use WEP security, select [Easy] ⟶ [Wi-Fi] ⟶ [Connect by scan list]. Then, select the network name (SSID) you want to connect.

Cannot find the required network name in network setup.

- Select [[Manual entry]] and press ⊕ to enter network name.

Specifications

System

Television system
NTSC: American TV standard
ATSC (8VSB terrestrial): ATSC compliant 8VSB
QAM on cable: ANSI/SCTE 07 2000 (Does not include CableCARD functionality)

Channel coverage
Analog terrestrial: 2 - 69 / Digital terrestrial: 2 - 69
Analog Cable: 1 - 135 / Digital Cable: 1 - 135

Panel system
LCD (Liquid Crystal Display) Panel, LED Backlight

Speaker output
XBR-75X940D, XBR-75X850D, XBR-65/55X930D: 7.5 W + 7.5 W + 7.5 W + 7.5 W
XBR-65/55X850D: 10 W + 10 W

Wireless technology
Protocol IEEE802.11ac/a/b/g/n
Bluetooth Version 4.1

Input/Output jacks

CABLE/ANTENNA
75-ohm external terminal for RF inputs

⏀/⏀ VIDEO IN 1
Video / Audio input (phono jacks)

⏀/⏀ COMPONENT IN
$Y P_B P_R$ (Component Video): 1080p (60 Hz), 1080i (60 Hz), 720p (60 Hz), 480p, 480i
Audio input (phono pin jack)

⏀ VIDEO IN 2
Video input (common phono pin with Y input)

HDMI IN 1/2/3/4 (Support 4K resolution, HDCP 2.2-compatible)
Video (2D):
4096 × 2160p (60 Hz)*, 4096 × 2160p (24 Hz)*, 3840 × 2160p (60 Hz), 3840 × 2160p (24, 30 Hz), 1080p (30, 60 Hz), 1080/24p, 1080i (60 Hz), 720p (30, 60 Hz), 720/24p, 480p, 480i, PC Formats
* 3840 × 2160p is displayed when 4096 × 2160p is input
Video (3D) (3D compatible models only):
Frame Packing: 1080p (30 Hz), 1080/24p, 1080i (60 Hz), 720p (30, 60 Hz), 720/24p
Side-by-Side: 1080p (60 Hz), 1080/24p, 1080i (60 Hz), 720p (60 Hz)
Over-Under: 1080p (30, 60 Hz), 1080/24p, 1080i (60 Hz), 720p (60 Hz)

US

Audio: 5.1 channel linear PCM: 32, 44.1, 48, 88.2, 96, 176.4 and 192 kHz, 16, 20 and 24 bits, Dolby Digital and DTS
ARC (Audio Return Channel) (HDMI IN 4 only)

DIGITAL AUDIO OUT (OPTICAL)
Digital optical jack (Two channel linear PCM, Dolby Digital, DTS)

AUDIO OUT /
Headphone, Audio output, Subwoofer

1, 2, SS 3
USB port 1 and 2 support High Speed USB (USB2.0).
USB port 3 supports Super Speed USB (USB3.0).

LAN
10BASE-T/100BASE-TX connector
(Connection speed may differ depending on the network environment. 10BASE-T/100BASE-TX communication rate and communication quality are not guaranteed for this TV.)

Home Network
Refer to the Help Guide for supported formats.

DC IN 24 V (XBR-65/55X930D only)
AC adapter input (24 V DC)

DC IN 19.5 V (XBR-55X850D only)
AC adapter input (19.5 V DC)

REMOTE
RS-232C, mini jack
This jack is for receiving the external control signal.

Others

Optional accessories
Wall-Mount Bracket: SU-WL810
(XBR-75X940D, XBR-65/55X930D only)
Wireless Subwoofer: SWF-BR100
Active 3D Glasses: TDG-BT500A
XBR-75X940D, XBR-65/55X930D only)

Operating temperature
32 °F – 104 °F (0 °C – 40 °C)

Power and others

Power requirement
except model with supplied AC adapter
110 V - 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)
models with supplied AC adapter only
24 V DC with AC adapter (XBR-65/55X930D)
19.5 V DC with AC adapter (XBR-55X850D)
Rating: Input 110 V - 240 V AC, 50/60 Hz (U.S.A./Canada 120 V AC, 60 Hz)

Power consumption
in use
XBR-75X940D: 331 W
XBR-75X850D: 241 W
XBR-65X930D: 225 W
XBR-65X850D: 193 W
XBR-55X930D: 199 W
XBR-55X850D: 139 W

in standby*
Less than 0.50 W with 120 V AC and less than 0.50 W with 240 V AC

Screen size (inches measured diagonally) (Approx.)
XBR-75X940D: 74.5 inches (75″ class)
XBR-75X850D: 74.5 inches (75″ class)
XBR-65X930D: 64.5 inches (65″ class)
XBR-65X850D: 64.5 inches (65″ class)
XBR-55X930D: 54.6 inches (55″ class)
XBR-55X850D: 54.6 inches (55″ class)

Display resolution
3,840 dots (horizontal) × 2,160 lines (vertical)

Output Rating
USB 1
5 V, ⎓, 500 mA MAX

USB 2
5 V, ⎓, 500 mA MAX

USB 3
5 V, ⎓, 900 mA MAX

* Standby power consumption will increase when your TV is connected to the network.

Dimensions (Approx.)

with stand
XBR-75X940D: 1,672 × 1,017 × 327 mm / 65 $^{7}/_{8}$ × 40 $^{1}/_{8}$ × 12 $^{7}/_{8}$ inches
XBR-75X850D: 1,677 × 1,026 × 286 mm / 66 $^{1}/_{8}$ × 40 $^{1}/_{2}$ × 11 $^{3}/_{8}$ inches
XBR-65X930D: 1,458 × 891 × 275 mm / 57 $^{1}/_{2}$ × 35 $^{1}/_{8}$ × 10 $^{7}/_{8}$ inches
XBR-65X850D: 1,454 × 894 × 279 mm / 57 $^{1}/_{4}$ × 35 $^{1}/_{4}$ × 11 inches
XBR-55X930D: 1,239 × 769 × 261 mm / 48 $^{7}/_{8}$ × 30 $^{3}/_{8}$ × 10 $^{3}/_{8}$ inches
XBR-55X850D: 1,231 × 770 × 263 mm / 48 $^{1}/_{2}$ × 30 $^{3}/_{8}$ × 10 $^{3}/_{8}$ inches

without stand
XBR-75X940D: 1,672 × 960 × 52 mm / 65 $^{7}/_{8}$ × 37 $^{7}/_{8}$ × 2 $^{1}/_{8}$ inches
XBR-75X850D: 1,677 × 969 × 49 mm / 66 $^{1}/_{8}$ × 38 $^{1}/_{4}$ × 1 $^{15}/_{16}$ inches
XBR-65X930D: 1,458 × 839 × 36 mm / 57 $^{1}/_{2}$ × 33 $^{1}/_{8}$ × 1 $^{7}/_{16}$ inches
XBR-65X850D: 1,454 × 842 × 44 mm / 57 $^{1}/_{4}$ × 33 $^{1}/_{4}$ × 1 $^{3}/_{4}$ inches

XBR-55X930D: 1,239 × 717 × 36 mm / 48 7/8 × 28 1/4 × 1 7/16 inches
XBR-55X850D: 1,231 × 717 × 44 mm / 48 1/2 × 28 1/4 × 1 3/4 inches

wall-mount hole pattern
XBR-75X940D: 400 × 300 mm
XBR-75X850D: 400 × 300 mm
XBR-65X930D: 300 × 200 mm
XBR-65X850D: 300 × 300 mm
XBR-55X930D: 300 × 200 mm
XBR-55X850D: 200 × 200 mm

wall-mount screw size (mm)
M6 (length: see diagram on page 15-17.)

Mass (Approx.)

with stand
XBR-75X940D: 43.2 kg / 95.2 lb.
XBR-75X850D: 38.7 kg / 85.3 lb.
XBR-65X930D: 32.1 kg / 70.8 lb.
XBR-65X850D: 23.9 kg / 52.7 lb.
XBR-55X930D: 24.9 kg / 54.9 lb.
XBR-55X850D: 18.6 kg / 41.0 lb.

without stand
XBR-75X940D: 38.7 kg / 85.3 lb.
XBR-75X850D: 33.4 kg / 73.6 lb.
XBR-65X930D: 28.9 kg / 63.7 lb.
XBR-65X850D: 20.3 kg / 44.8 lb.
XBR-55X930D: 22.0 kg / 48.5 lb.
XBR-55X850D: 15.1 kg / 33.3 lb.

Note

- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.

Licensing Information

- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.
- Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.
- “BRAVIA” and BRAVIA, S-Force, Motionflow, BRAVIA Sync, and ® are trademarks or registered marks of Sony Corporation.
- Gracenote, Gracenote eyeQ, Gracenote VideoID, Gracenote Video Explore, the Gracenote logo and logotype, and the “Powered by Gracenote” logo are either registered trademarks or trademarks of Gracenote in the United States and/or other countries.
- Opera® Devices SDK from Opera Software ASA. Copyright 1995-2015 Opera Software ASA. All rights reserved.
- Wi-Fi, Wi-Fi Direct, Miracast, Wi-Fi Protected Setup and Wi-Fi CERTIFIED Logo are trademarks or registered trademarks of Wi-Fi Alliance.
- For DTS patents, see http://patents.dts.com. Manufactured under license from DTS, Inc. DTS, the Symbol, & DTS and the Symbol together are registered trademarks, and DTS Digital Surround is a trademark of DTS, Inc. © DTS, Inc. All Rights Reserved.
- Designed with UEI Technology™ Under License from Universal Electronics Inc. Portions © UEI 2000 - 2014
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Corporation is under license. Other trademarks and trade names are those of their respective owners.
- TUXERA is a registered trademark of Tuxera Inc. in the US and other countries.

- USB-IF SuperSpeed USB Trident logo is a registered trademark of USB Implementers Forum, Inc.

Actual resolution:
3840 x 2160 pixels.

For Your Convenience	
Online Registration:	Be sure to register your TV. **United States** http://productregistration.sony.com **Canada** http://www.sony.ca/registration
Software Updates:	Your TV is capable of receiving software updates. For the latest information about software updates for your TV, visit: **United States** http://www.sony.com/tvsupport **Canada** http://www.sony.ca/support NOTE: If your TV is connected to the Internet, you can check for software updates by selecting [Help], [System software update] and then [Check for a system software update].

Pour votre commodité	
Enregistrement en ligne :	Faire en sorte de compléter l'enregistrement de votre téléviseur. **Canada** http://www.sony.ca/fr/registration **États-Unis** http://productregistration.sony.com
Mise à jour du logiciel :	Votre téléviseur est en mesure de recevoir des mises à jour logicielles. Pour obtenir les renseignements les plus à jour sur les mises à jour du logiciel de votre téléviseur, visitez : **Canada** http://support.sony.ca/fr **États-Unis** http://www.sony.com/tvsupport REMARQUE : Si votre téléviseur est connecté à Internet, vous pouvez vérifier les mises à jour du logiciel en sélectionnant [Aide], [Mise à jour du logiciel], puis [Vérifier les mises à jour du logiciel].

?

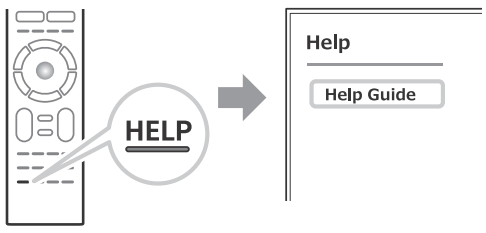

Help Guide
Manuel d'aide

http://www.sony.net/

© 2016 Sony Corporation Printed in U.S.A.

SONY

Television

Setup Guide

BRAVIA

XBR-75X940D / 65X937D / 65X935D / 65X930D / 55X930D

US Setup Guide
FR Manuel de configuration
ES Guía de configuración
PT Guia de Configuração

4584892121
4-584-892-12(1)

Sony Customer Support

U.S.A.:
http://www.sony.com/tvsupport
Canada:
http://www.sony.ca/support
United States 1.800.222.SONY
Canada 1.877.899.SONY
Please Do Not Return the Product to the Store

Service à la clientèle Sony

Canada :
http://support.sony.ca/fr
États-Unis :
http://www.sony.com/tvsupport
Canada 1.877.899.SONY
États-Unis 1.800.222.SONY
Ne retournez pas le produit au magasin

Lea este manual antes de usar el producto

Centro de Asistencia de Sony

http://esupport.sony.com/ES/LA/
Llame al número telefónico que aparece en su póliza de garantía.
Por favor no devuelva el producto a la tienda donde adquirió el producto.

Suporte ao Cliente Sony

http://esupport.sony.com/BR/
Não devolva o produto à loja

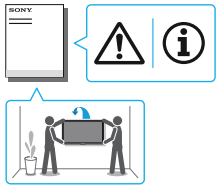

Reference Guide / Manuel de référence / Guía de referencia / Manual de Instruções

Help Guide / Manuel d'aide / Guía de ayuda / Guia de Ajuda

For Customers other than in Columbia / Pour les clients hors Colombie / Para clientes fuera de Columbia / Para Clientes que não sejam da Colômbia

http://rd1.sony.net/help/tv/cusltn1/h_us/

For Customers in Columbia / Pour les clients en Colombie / Para clientes en Columbia / Para Clientes na Colômbia

http://rd1.sony.net/help/tv/ccol1/h_co/

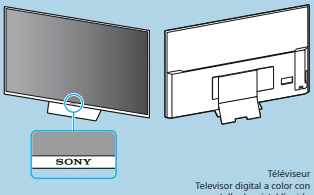

Téléviseur
Televisor digital a color con pantalla de cristal líquido
Televisor

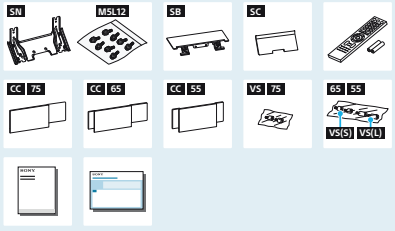

*1

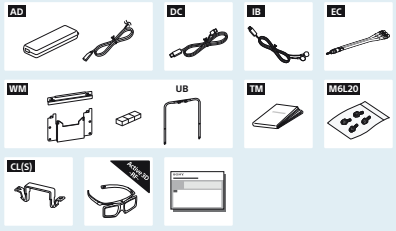

*1

Only on limited region/country/TV model.
Uniquement pour des régions/pays/modèles de téléviseurs.
Solo en regiones/países limitados/Modelo de TV.
Somente para determinadas regiões/países/modelos de TV.

1

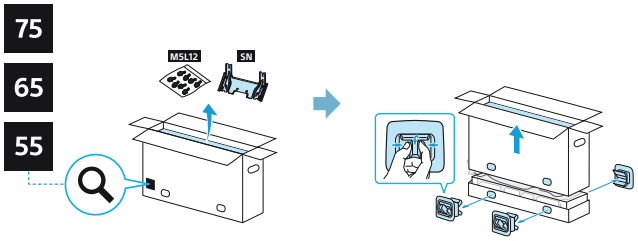

2

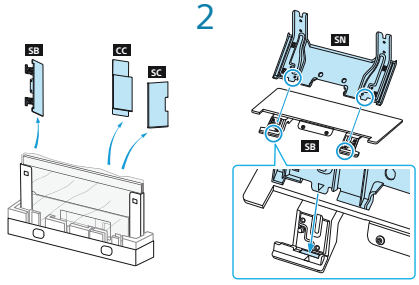

3

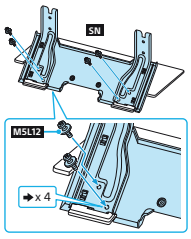

4

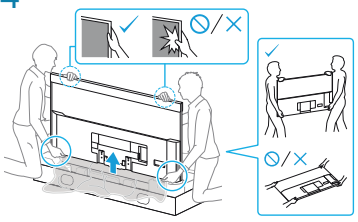

5

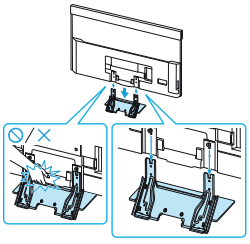

6

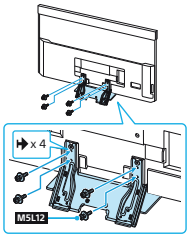

7

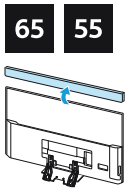

© 2016 Sony Corporation Printed in Mexico

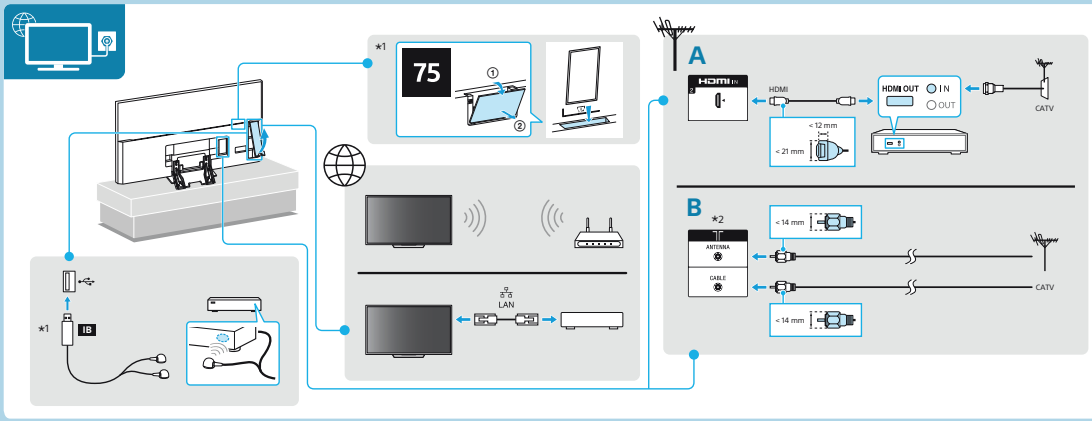

Connections Refer to "Connection Diagram" in the Reference Guide for additional connection information.

Raccordements Reportez-vous au « Schéma de connexion » dans le Manuel de référence pour des informations de raccordement supplémentaires.

Connexions Consulte la "Diagrama de conexión" en la Guía de referencia para obtener más información sobre la conexión.

Conexões Consulte "Diagrama de Conexão" no Manual de Instruções para mais informações sobre conexão.

*2



Terminals and labels may vary depending on TV model.
Les bornes et étiquettes peuvent varier selon le modèle de téléviseur.
Los terminales y las etiquetas pueden variar según el modelo de TV.
Terminais e etiquetas podem variar dependendo do modelo de televisor.

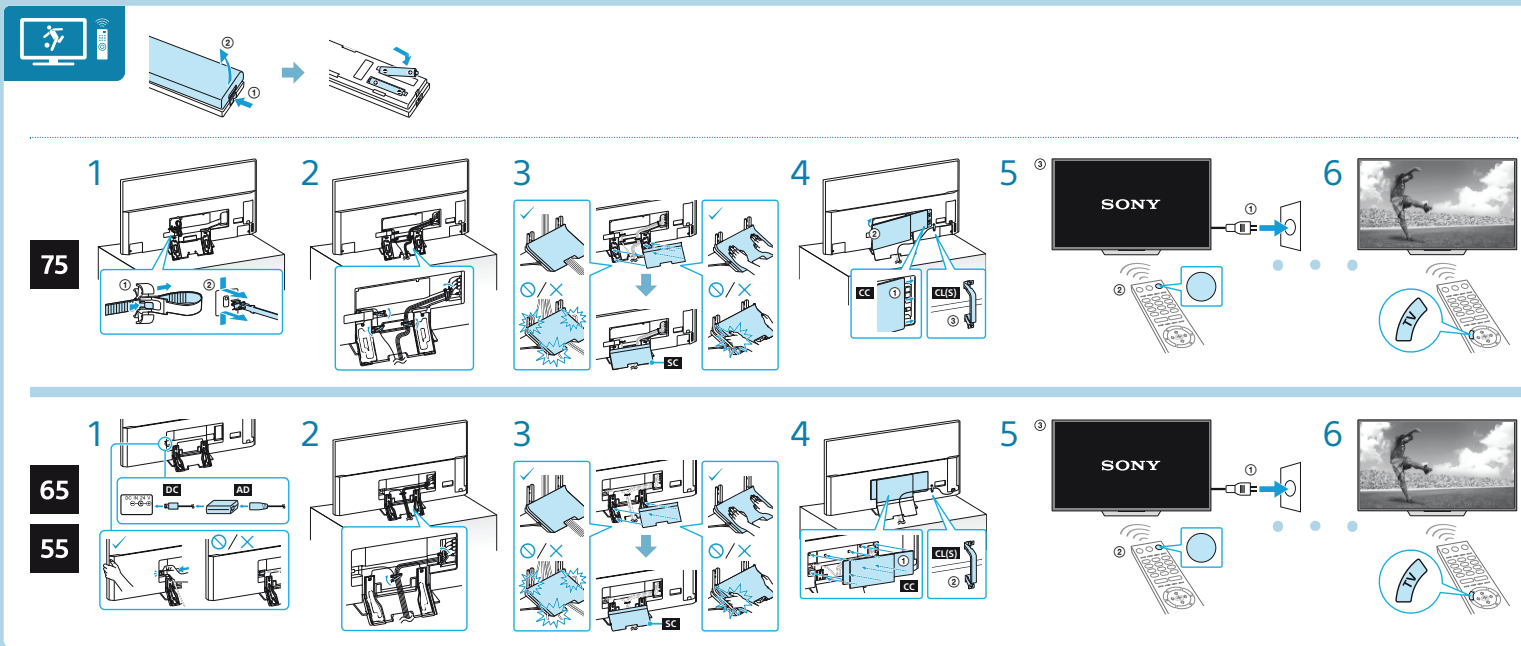

SONY
Sony Electronics Inc.,

How to unpack 55” and larger FY16 “D” TV models to avoid panel damage

Set-up Guide can be found under Manuals, Spec, Warranty:
https://esupport.sony.com/

1) Set-up Guide can be found inside top carton flap:

Carton top surface

Set-up Guide taped to top inside tab

2) Pinch and Pull all 4 plastic joints to remove carton and safely remove the TV from tray:

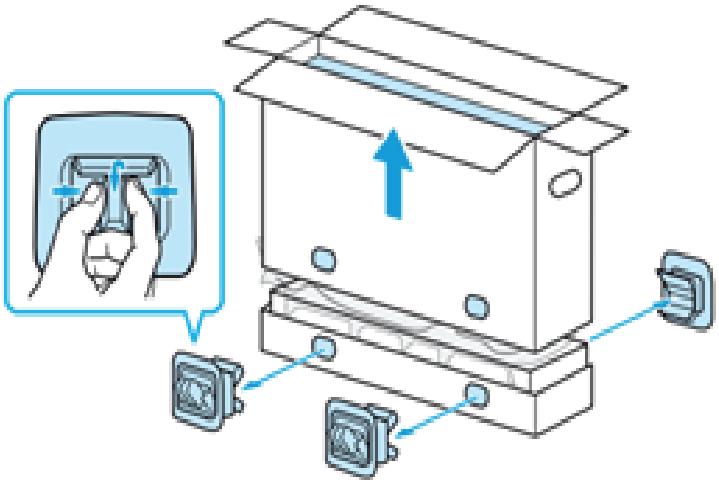

3) Follow Set-up Guide unpacking illustration (Lift from bottom of TV):

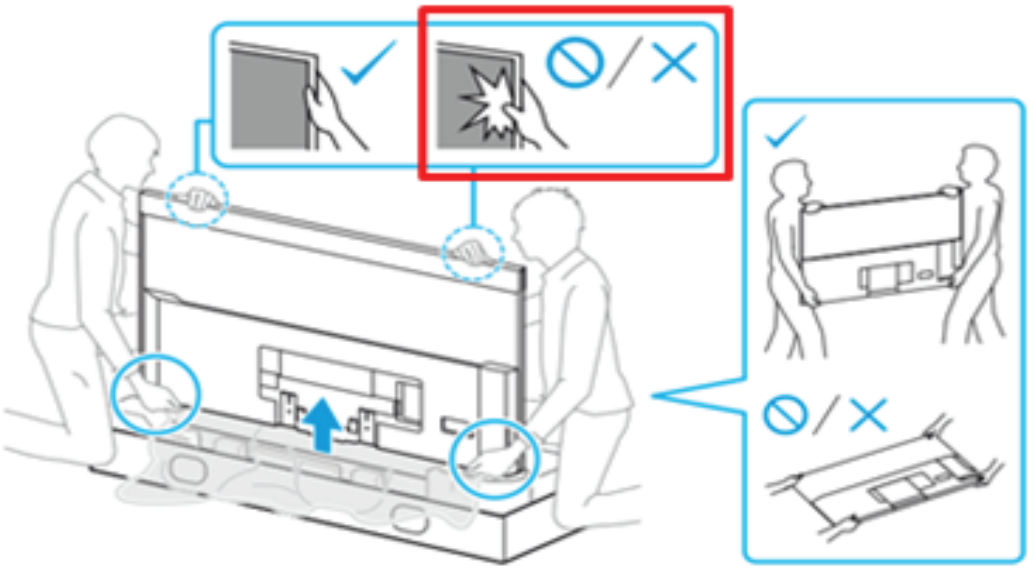

SONY

4-592-244-**11**(1)

4592244111

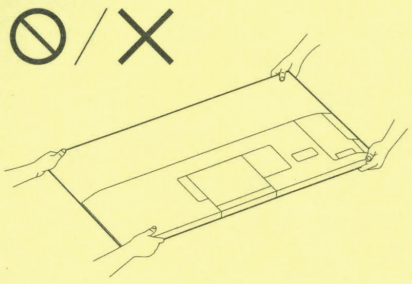

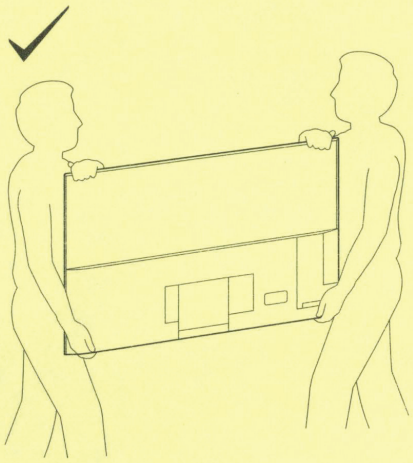

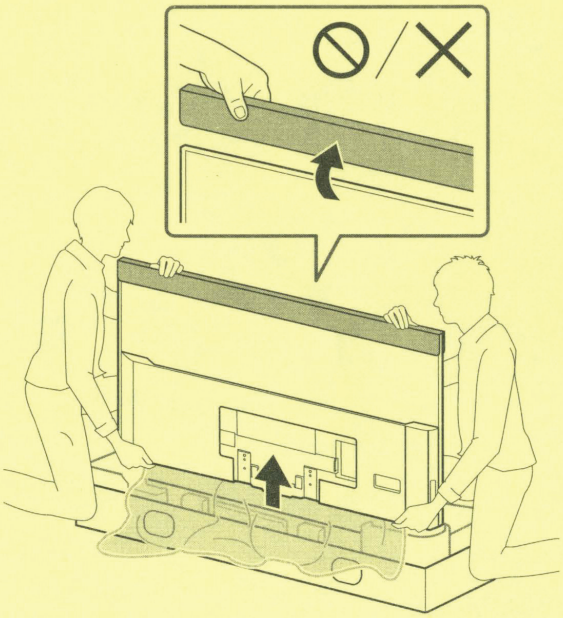

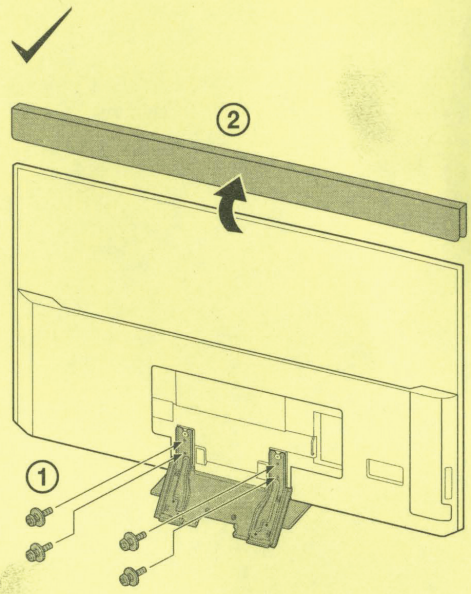

© 2016 Sony Corporation

Printed in U.S.A.

SONY

4-589-397-**11** (2)

Safety and Regulatory Booklet US

Read and understand the contents of this booklet before operating your new TV.

Feuillet de consignes d'utilisation et de sécurité FR

Veuillez lire et vous assurer de comprendre le contenu de ce feuillet avant d'utiliser votre nouveau téléviseur.

Folleto de instrucciones de seguridad ES

Lea y entienda el contenido de este folleto antes de operar su nuevo televisor.

© 2015 Sony Corporation

Important Safety Instructions

1) Read these instructions.
2) Keep these instructions.
3) Heed all warnings.
4) Follow all instructions.
5) Do not use this apparatus near water.

6) Clean only with dry cloth.

7) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong.
The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.





10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

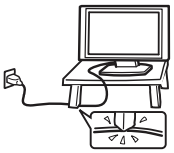

11) Only use attachments/ accessories specified by the manufacturer.

12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/ apparatus combination to avoid injury from tip-over.

13) Unplug this apparatus during lightning storms or when unused for long periods of time.

14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Please observe the Additional Safety DOs and DON'Ts to avoid electric shock, short-circuit, fire, bodily injury or property damage.

WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture. The product must never be exposed to dripping, splashing, or spilling liquids of any kind.

This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

Outdoor Antenna Grounding

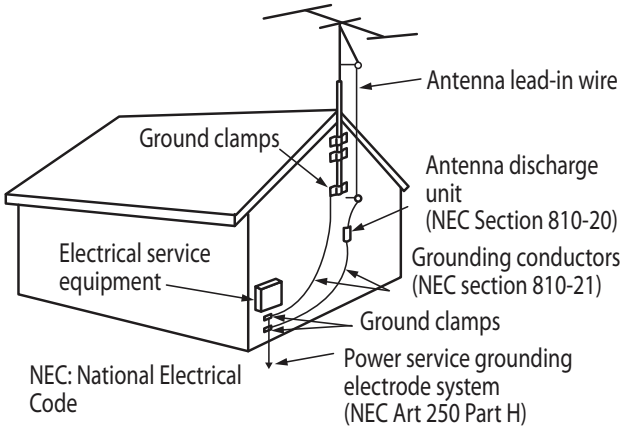
Antenna lead-in wire
Ground clamps
Antenna discharge unit (NEC Section 810-20)
Electrical service equipment
Grounding conductors (NEC section 810-21)
Ground clamps
Power service grounding electrode system (NEC Art 250 Part H)
NEC: National Electrical Code

Additional Safety DOs and DON'Ts

US

MOISTURE

- ☐ Do not place liquid filled objects such as a vase or potted plant on the TV.
- ☐ Do not use a power line operated TV set near water; for example, near a bathtub, washbowl, kitchen sink, laundry tub, wet basement or near a swimming pool, etc.

- ☐ Do not install the TV in a location where sulfur is present (e.g., hot springs). This may cause a fire, electric shock or damage to your TV.

CLEANING

When cleaning, be sure to unplug the power cord to avoid any chance of electric shock.

- ☐ Clean the cabinet of the TV with a dry soft cloth.
- ☐ Wipe the LCD screen gently with a soft cloth.
- ☐ Stubborn stains may be removed with a cloth slightly moistened with a solution of mild soap and warm water.
- ☐ Do not spray water or detergent directly on the TV set. It may drip to the bottom of the screen or exterior parts, and may cause a malfunction.
- ☐ If using a chemically pretreated cloth, please follow the instruction provided on the package.
- ☐ Never use strong solvents such as a thinner, alcohol or benzine for cleaning.
- ☐ Periodic vacuuming of the ventilation openings is recommended to ensure to proper ventilation.

VENTILATION

The ventilation openings in the TV are necessary to ensure reliable operation of the TV and to protect it from overheating.

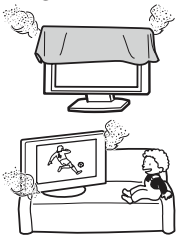

- ☐ Do not block or cover the ventilation openings with cloth or other materials.
- ☐ Never place the TV on a bed, sofa, rug or other similar surface where ventilation openings may be blocked.

☐ Unless proper ventilation is provided, the TV may accumulate dust and cause damage.

☐ Never allow liquid or solid objects to fall into the ventilation openings.

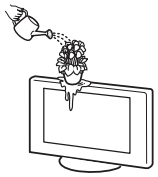

☐ If any liquid or solid object falls inside the TV, unplug the TV immediately and have it checked by qualified service personnel before operating it further.

☐ Never push objects of any kind into the TV through the ventilation openings as they may come in contact with dangerous voltage points or short out parts that could result in a fire or an electric shock.

Allow adequate space around the TV set to ensure proper air circulation.

☐ Never place the TV in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided.

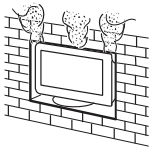

☐ There should be a clearance of at least 11 7/8 inches (30 cm) above the TV set and 4 inches (10 cm) on each side. If mounted on the wall, allow at least 4 inches (10 cm) of clearance at the bottom of the screen. (See additional information provided in the Operating Instructions manual.)

INSTALLATION

The TV should be installed near an easily accessible AC power outlet.

☐ Do not install the TV face up or down, upside down or on its side.

☐ Do not install the TV in hot, humid, excessively dusty places or in areas with oily smoke or steam (e.g., near a stove or humidifier). Fire, electric shock, or warping may occur.



☐ Do not install the TV in places subject to extreme temperature, such as in direct sunlight, near a radiator or a heating vent. The TV may overheat in such conditions which can cause deformation of the enclosure and/or TV malfunction.

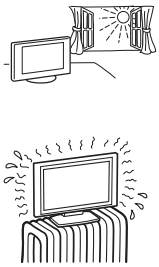

☐ Do not install the TV in a place exposed to direct air conditioning; moisture may condense inside and may cause TV malfunction.

☐ Do not install the TV where it may be exposed to mechanical vibration.

☐ Do not install the TV where insects may enter.

☐ Do not install the TV so that it protrudes into an open space. Injury or damage may result from a person or object bumping into the TV.

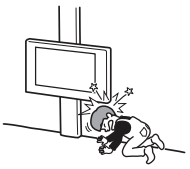

☐ To prevent fire keep flammable objects or open flame (e.g. candles) away from the TV.

☐ Do not place optional equipment on top of the TV.

Prevent the TV from toppling over

Take measures to prevent the TV from toppling over and causing injury or damage to the TV and property.

☐ Secure the TV to a wall and/or stand.

☐ Never install the TV on unstable and/or uneven surfaces.

☐ Do not allow children to climb on or play with furniture and TV sets.

☐ Do not install the TV on furniture that can easily be used as steps, such as a chest of drawers.

☐ Care should be taken to install the TV where it cannot be pushed, pulled over, or knocked down.

☐ Care should be taken to route all AC power cords and connecting cables so that they cannot be pulled or grabbed by curious children.

Medical institutions

Do not place this TV in a place where medical equipment is in use. It may cause a medical equipment malfunction.

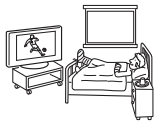

Outdoor use

Do not install this TV outdoors. The TV should not be exposed to rain or direct sunlight in order to avoid damage and possible fire or electric shock.

Do not install this TV in a vehicle, ship or other vessel

☐ Excessive bumping motion of a moving vehicle or continuous swaying motion on a boat may cause the TV to fall down and cause injury.

☐ Exposing the TV to seawater may cause a fire, electric shock or damage to your TV.

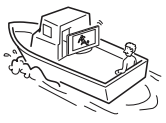

Magnetic influence

☐ This TV contains a strong magnet in the speaker unit that generates a magnetic field. Keep any items susceptible to magnetic fields away from the speaker.

☐ Electro-magnetic radiation emitted from optional equipment installed too close to the TV may cause picture distortion and/or noisy sound.

Wall-mount use



☐ Wall-mount installation requires the use of a Wall-Mount Bracket. When installing or removing the TV and the Wall-Mount Bracket, be sure to use qualified contractors. If not properly secured during installation or removal from the Wall-Mount Bracket, the TV may fall and cause serious injury.

☐ Be sure to follow the installation guide supplied with the Wall-Mount Bracket when installing the TV.

☐ Be sure to attach the brackets with the specified parts supplied with the Wall-Mount Bracket.

☐ Do not hang the TV from the ceiling. It may fall and cause serious injury.

☐ Do not hang anything on the TV.

☐ Do not allow children to climb on the TV.

AC POWER CORD

☐ Do not touch the AC power cord and its plug with wet hands as it may cause electric shock.

☐ When disconnecting the AC power cord, grasp the plug and disconnect from the wall outlet first. Do not pull by the cord.

☐ Keep the power cord away from heat sources.

A TV set with a three-wire grounding type AC power cord plug must be connected to an AC power outlet with a protective earthing connection (only applicable for Class I product).

☐ Do not convert or damage the AC power cord.

☐ Consult your electrician to have the outlet changed to suit your TV.

Subjecting the AC power cord to wear and/or abuse can damage the AC power cord and your TV.

☐ Do not place the TV where the power cord can be easily pinched, bent, twisted, or catch your feet.

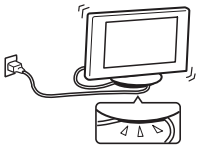

☐ Do not allow anything to rest on or roll over the cord.

☐ Before connecting cables, be sure to unplug the AC power cord for your safety.

☐ Do not move the TV with the AC power cord (or other cables such as audio and video) connected.

☐ Use only an original Sony AC power cord with your TV; no brand substitution is allowed.

☐ Do not use AC power cord supplied with the TV with any other equipment.

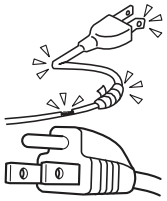

☐ Never use a damaged AC power cord. A damaged AC power cord can cause a short-circuit, which may result in a fire or electric shock.

Do not use a damaged or poorly fitting AC power outlet as your TV's power source.

☐ Insert the plug fully into the outlet. If it is loose, it may cause arcing and result in a fire.



☐ Do not overload the same AC power outlet.

Unplugging the AC power cord from the wall outlet will completely remove power from the TV.



☐ During lightning storms or when the TV is left unattended and unused for extended periods of time, the AC power cord should be unplugged from the wall outlet. This will avoid possible damage to your TV. Also unplug the antenna to prevent damage to the TV.

☐ For energy conservation and safety reasons, practice unplugging the AC power cord from the AC power outlet.

Clean the AC power plug

Unplug the AC power plug and clean it occasionally to avoid dust from accumulating. While cleaning, look for signs of damage. A damaged AC power cord should never be used.

ACCESSORIES

Keep small accessories out of children's reach. Use only the specified accessories with this TV.

Volume Adjustment

☐ When using headphones, adjust the volume to avoid excessive audio levels from causing possible hearing loss.

BATTERIES

Your remote control batteries are consumables.

☐ Dispose of batteries in an environmentally friendly way. Certain regions may regulate the disposal of batteries. Please consult your local authority.
☐ Do not dispose of batteries in a fire.
☐ Do not short-circuit, disassemble or overheat the batteries.
☐ Batteries must not be exposed to excessive heat such as sunshine, fire or the like.

LCD SCREEN

☐ Although the LCD screen is made with high-precision technology and has effective pixels of 99.99% or more, black dots or bright points of light (red, blue, or green) may appear constantly on the LCD screen. This is a structural property of the LCD panel and is not a malfunction.
☐ The LCD screen is made with high-precision technology and to achieve a high level of performance and picture quality, this TV's backlight setting is set to maximize the brightness of the TV. However, uneven brightness may be observed when the LCD TV is viewed in a dark ambient without an input source or with a blank screen. This condition is normal and not a malfunction of the TV. Changing the Picture mode, Backlight setting, enabling the Light Sensor (if applicable), or turning on the Power Management will improve this condition.
☐ To avoid damaging the LCD panel, do not expose the LCD screen to direct sunlight.
☐ Do not push or scratch the LCD screen, or place objects on top of the TV. The images may be uneven or the LCD panel may be damaged.
☐ If the TV is used in a cold place, the picture may smear or become dark. This does not indicate a failure. These phenomena improve as the temperature rises.
☐ Ghosting may occur when still pictures are displayed continuously. It should disappear after a few moments.
☐ The LCD screen and enclosure get warm when the TV is in use. This is not a malfunction.
☐ Avoid spraying insect repellent with volatile material on the LCD screen.
☐ Avoid prolonged contact with rubber or plastic material to the LCD screen.

Broken screen panel

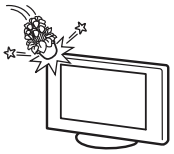

Do not throw anything at the LCD screen and its edges as the impact can cause the LCD screen glass to crack, break or shatter.

☐ If damage occurs to the LCD panel, small traces of liquid crystal sandwiched between the glass may be found on scattered broken glass.
☐ Do not touch the broken glass with bare hands. As with any broken glass pieces, avoid skin contact and exposure to your eyes or mouth. Avoid direct contact with liquid or damp surfaces of the glass as these may have an adverse effect on some people. The contacted area should be rinsed thoroughly with water. If conditions persist, see your doctor.
☐ If the surface of the TV cracks, do not touch the TV until you have unplugged the AC power cord. Otherwise this may cause an electric shock.

SERVICING

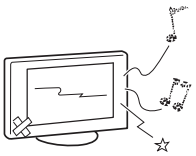

Do not use the TV if you suspect the TV is damaged or if the TV is damaged.

- ☐ Do not attempt to service the TV yourself since opening the cabinet may expose you to dangerous voltage levels or other hazards. Refer all servicing to qualified service personnel.

- ☐ If replacement parts are required, acquire a written certification from the service technician which states that adequate replacement parts with the same or similar characteristics as the original parts have been used. Unauthorized substitutions may result in a fire, an electric shock or other hazards.

Safety check

- ☐ Upon completion of any TV servicing or repair, ask the service technician to perform routine safety checks as specified by Sony and to certify that the TV is safe to operate. Have a qualified service technician dispose of the TV if it is not safe to operate.

CAUTION

- ☐ Some people may experience discomfort (such as eye strain, fatigue, or nausea) while watching 3D video images or playing stereoscopic 3D games. Sony recommends that all viewers take regular breaks while watching 3D video images or playing stereoscopic 3D games. The length and frequency of necessary breaks will vary from person to person. You must decide what works best. If you experience any discomfort, you should stop watching the 3D video images or playing stereoscopic 3D games until the discomfort ends; consult a doctor if you believe necessary. The vision of young children (especially those under six years old) is still under development. Consult your doctor (such as a pediatrician or eye doctor) before allowing young children to watch 3D video images or play stereoscopic 3D games. Adults should supervise young children to ensure they follow the recommendations listed above.

Printed in U.S.A.

CHILD SAFETY:

PROPER TELEVISION PLACEMENT MATTERS

THE CONSUMER ELECTRONICS INDUSTRY CARES

- Manufacturers, retailers and the rest of the consumer electronics industry are committed to making home entertainment safe and enjoyable.
- As you enjoy your television, please note that all televisions – new and old- must be supported on proper stands or installed according to the manufacturer's recommendations. Televisions that are inappropriately situated on dressers, bookcases, shelves, desks, speakers, chests, carts, etc., may fall over, resulting in injury.

TUNE IN TO SAFETY

- **ALWAYS** follow the manufacturer's recommendations for the safe installation of your television.
- **ALWAYS** read and follow all instructions for proper use of your television.
- **NEVER** allow children to climb on or play on the television or the furniture on which the television is placed.
- **NEVER** place the television on furniture that can easily be used as steps, such as a chest of drawers.
- **ALWAYS** install the television where it cannot be pushed, pulled over or knocked down.
- **ALWAYS** route cords and cables connected to the television so that they cannot be tripped over, pulled or grabbed.

WALL OR CEILING MOUNT YOUR TELEVISION

- **ALWAYS** contact your retailer about professional installation if you have any doubts about your ability to safely mount your television.
- **ALWAYS** use a mount that has been recommended by the television manufacturer and has a safety certification by an independent laboratory (such as UL, CSA, ETL).
- **ALWAYS** follow all instructions supplied by the television and mount manufacturers.
- **ALWAYS** make sure that the wall or ceiling where you are mounting the television is appropriate. Some mounts are not designed to be mounted to walls and ceilings with steel studs or cinder block construction. If you are unsure, contact a professional installer.
- Televisions can be heavy. A minimum of two people is required for a wall or ceiling mount installation.

MOVING AN OLDER TELEVISION TO A NEW PLACE IN YOUR HOME

- Many new television buyers move their older CRT televisions into a secondary room after the purchase of a flat-panel television. Special care should be made in the placement of older CRT televisions.
- **ALWAYS** place your older CRT television on furniture that is sturdy and appropriate for its size and weight.
- **NEVER** place your older CRT television on a dresser where children may be tempted to use the drawers to climb.
- **ALWAYS** make sure your older CRT television does not hang over the edge of your furniture.

CE.org/safety

CEA
Consumer Electronics Association

SONY

Your TV's about to get a whole lot better!

Improved features and more apps are on the way!

How to perform Software update
Comment effectuer une mise à jour logicielle
Cómo realizar la actualización de software

BRAVIA

3 Steps to Upgrade

1 Connect your TV to the Internet
Connectez votre téléviseur à Internet
Conecte su TV a Internet

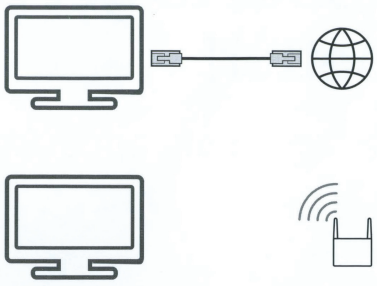

During Initial setup - follow the on-screen directions.
OR
Select HOME (on the remote) - [Settings] - [Network], then follow on-screen directions.

Pendant la configuration initiale, suivez les instructions à l'écran.
OU
Sélectionnez HOME (sur la télécommande) - [Paramètres] - [Réseau], puis suivez les instructions à l'écran.

Durante la configuración inicial - siga las instrucciones que se muestran en la pantalla.
O
Seleccione HOME (en el control remoto) - [Configuración] - [Red], y luego siga las instrucciones que se muestran en la pantalla.

2 Check for a system software update
Vérifier les mises à jour du logiciel
Verificar si hay una actualización de software

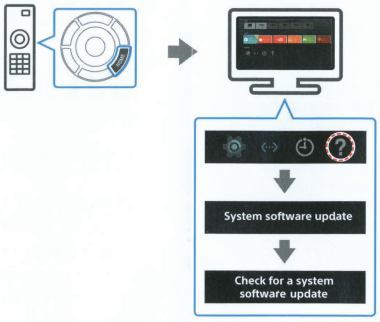

Select HOME (on the remote) - [Help] – [System software update] - [Check for a system software update].
If available, initiate the software download.

Sélectionnez HOME (sur la télécommande) - [Aide] - [Mise a jour du logiciel] - [Vérifier les mises à jour du logiciel]. Si une mise à jour est disponible, démarrez le téléchargement du logiciel.

Seleccione HOME (en el control remoto) - [Ayuda] - [Actualización de software del sistema] - [Verificar si hay una actualización de software]. Si la hay, inicie la descarga de software.

3 Begin updating your TV
Démarrez la mise à jour de votre téléviseur
Comience a actualizar su TV

- Do not unplug the TV during the update process.
- Ne débranchez pas le téléviseur pendant le processus de mise à jour.
- No desconecte el TV durante la actualización.

It takes approximately 60 min to complete.
Note: Software can be downloaded to a USB storage device for offline upgrades. Visit http://www.sony.com/tvsupport (U.S.A) or http://www.sony.ca/support (Canada).

Ce processus prend environ 60 minutes.
Remarque : Vous pouvez télécharger le logiciel sur un périphérique de stockage USB pour effectuer la mise à niveau hors ligne. Visitez http://www.sony.com/tvsupport (États-Unis) ou http://www.sony.ca/support (Canada).

Toma aproximadamente 60 min en completarse.
Nota: El software puede descargase a un dispositivo de almacenamiento USB para actualizaciones sin Internet. Visite http://www.sony.com/tvsupport (EE. UU.) o http://www.sony.ca/support (Canadá).

A Smart TV that's always getting smarter. Be on the look out for future upgrades.
Un téléviseur intelligent toujours plus connecté. Demeurez à l'affût pour les prochaines mises à niveau.
Un Smart TV que cada vez es más inteligente. Manténgase atento a las futuras actualizaciones.

English

[Note]

- When you plug in your TV and press the power button on the remote or TV control panel, the TV may not turn on for around a minute. Please wait for a while, then operate the TV.
- To perform a full reset of the TV, press and hold the power button for about 5 seconds. The TV will turn off and then restart automatically.
- This television has voice recognition features, which may be offered by Sony, Google or a third party.

Français

[Remarque]

- Lorsque vous branchez votre téléviseur et que vous appuyez sur le bouton d'alimentation de la télécommande ou du panneau de commande du téléviseur, le téléviseur pourrait ne pas s'allumer pendant environ une minute. Veuillez patienter un instant, puis faites fonctionner le téléviseur.
- Pour effectuer une réinitialisation complète du téléviseur, appuyez sur le bouton d'alimentation pendant environ 5 secondes. Le téléviseur s'éteindra puis redémarrera automatiquement.
- Ce téléviseur est équipé de fonctions de reconnaissance vocale, qui peuvent être offertes par Sony, Google ou une partie tierce.

Español

[Nota]

- Cuando conecte su TV y presione el botón de encendido en el control remoto o en el panel de control del TV, este podría tardar un minuto en encenderse. Por favor, espere un momento, y luego utilice el TV.
- Para realizar un restablecimiento completo del TV, mantenga presionado el botón de encendido durante aproximadamente 5 segundos. El TV se apagará y luego se reiniciará automáticamente.
- Este televisor tiene funciones de reconocimiento de voz, que pueden ser ofrecidos por Sony, Google o por un tercero.

4-584-374-**22**(1)

© 2015 Sony Corporation Printed in U.S.A.

4584374221

DON'T JUST WATCH TV. DIRECTV.®

Save $120^

A SPECIAL OFFER NOT AVAILABLE TO THE GENERAL PUBLIC!

That's an extra $10 off every month for 12 months in addition to DIRECTV's new customer offers.

When you order the SELECT™ Package or higher.

OTHER PACKAGES STARTING AT

$29.99 mo. Plus add'l fees.

Everyday Low Price
FAMILY™ Package

FREE Professional Installation in up to 4 rooms

NO EQUIPMENT TO BUY
NO START-UP COSTS

LOCAL CHANNELS
IN HD IN OVER 99% OF THE U.S.!

All DIRECTV offers require a 24-month agreement.**
Offers available through 12/31/15. Another offer will be available beginning 1/1/16. Credit card required (except in MA & PA). New approved customers only (lease required). Hardware available separately. $19.95 Handling & Delivery fee may apply. Applicable use tax adjustment may apply on the retail value of the installation. Programming, pricing and offers are subject to change and may vary in certain markets. Some offers may not be available through all channels and in select areas. See inside for details.

BUNDLE AND SAVE EVEN MORE!

Additional telco equipment and service fees apply. Savings amount will be lower with certain providers. Eligibility based on service address.

Plus, save up to an additional **$120‡‡** when you bundle DIRECTV with Internet and phone.
With SELECT™ Package or higher.

Save $120 only when you call this dedicated number

1-855-333-0068

DIRECTV service and offers not available outside of the U.S.
Le service et les offres de DIRECTV ne sont pas disponibles à l'extérieur des États-Unis.

All programming and pricing valid as of May 2015. Programming, pricing and offers are subject to change and may vary in certain markets.

4198223035

A special offer for Sony customers.
Not available to the general public!

Get $10 off every month for 12 months

SAVE $120^

in addition to DIRECTV's new customer offers.

New customers only.
Activation of the SELECT™ Package or higher required. With 24-month agreement.**
Conditions apply. See inside for offer details.

Save $120 only when you call this dedicated number

1-855-333-0068

SONY | DIRECTV

DIRECTV service and offers not available outside of the U.S.
Le service et les offres de DIRECTV ne sont pas disponibles à l'extérieur des États-Unis.

DIRECTV

THE MOST SAVINGS. THE MOST TELEVISION.

PLUS, ALL THIS:

NO Equipment to buy
NO Start-up costs

INCLUDED
Local Channels in HD in over 99% of the U.S.
Local channel eligibility based on service address. Not all networks available in HD in all markets.

#1 in customer satisfaction over all other cable and satellite providers
As compared to the largest national cable & satellite TV providers. 2015 American Customer Satisfaction Index.

99% Worry-free signal reliability
Based on a Nationwide Study of representative cities.

FREE Professional installation in up to 4 rooms
Includes standard installation only. $19.95 Handling & Delivery fee may apply. Applicable use tax adjustment may apply on the retail value of the installation.

The HD Channels You Want!

AMAZING PICTURE

DIRECTV delivers over 200 full-time HD channels—including local channels in over 99% of the U.S.[1] and the sports you really want![2] You'll also get access to the best movies in 1080p[3] with Dolby® Digital 5.1 Surround Sound;[4] for a viewing experience that redefines home entertainment!

Not all titles available in 1080p.

Plus, order now and get over 45 premium channels FREE for 3 months with the SELECT™ through ULTIMATE Packages.*

HBO starz SHOWTIME CINEMAX

Not all premium channels available in HD. With 24-month agreement.**

DIRECTV Genie® and Wireless Genie Mini

Say goodbye to messy cable wires and boxes in every room. And with Wireless Genie Minis, you can connect multiple TVs wirelessly to one HD DVR,[5] so you can put your TVs anywhere in your home—even outside![6]

- Never see the clutter of cable again
- DIRECTV gives you the freedom to move your TV anywhere[6]
- Connect multiple TVs wirelessly to one HD DVR
- One HD DVR powers your entire home[7]

5. Requires one TV connected to a Genie HD DVR and a Wireless Genie Mini for each additional TV. 6. Not available on the television which is connected to the Genie HD DVR. Actual range of wireless signal varies and may be affected by several factors including, but not limited to: home construction materials, obstructions, electromagnetic interference and other environmental factors. Connections of Wireless Genie Mini to TV and power source are required. For residential use in a single household only. 7. Requires a Genie Mini or DIRECTV Ready TV/Device for each additional TV. Limit three remote viewings per Genie HD DVR at a time.

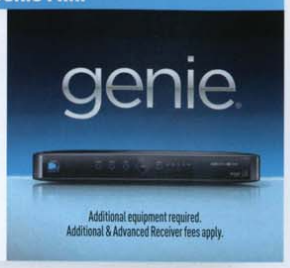

Additional equipment required.
Additional & Advanced Receiver fees apply.

4 Myths Busted

"My signal will go out."
Wrong. DIRECTV's high-powered satellites deliver 99% worry-free signal reliability.
Based on a Nationwide Study of representative cities.

"The equipment is too expensive."
No. There's no equipment to buy and no start-up costs.

"Switching TV services is a hassle."
Not true. Upgrading is easy. Just sign up and leave the rest to us.

"I can't get local channels with DIRECTV."
Yes, you can. DIRECTV service includes local channels in over 99% of U.S. markets!

4K Ultra HD TVs—Upscale everything you watch.

DIRECTV Everywhere

Watch the same movies and shows anywhere—on your TVs at home, plus your laptop, tablet or cell phone. At no extra charge![8]
Limited programming available. Standard programming fees apply. Conditions apply. Details below.

YOUR MOBILE DEVICES ARE PORTABLE TVS!
Turn your tablet into a portable TV and watch your favorite channels anywhere in your home[8]

STREAM THOUSANDS OF TITLES AT NO EXTRA CHARGE
Instantly watch your favorite titles from networks like HBO,® STARZ,® SHOWTIME®, Nickelodeon, HGTV, A&E, Comedy Central and more—anytime, anywhere, on any device.[8]
Availability of channels varies based on programming subscription.

SMART SEARCH
enables you to search all channels, all movies, either On Demand or streaming.

The Ultimate Picture Quality

4K **DIRECTV HAS 4K,** the best picture format available. It's like a theater-quality experience in your home.[2]

Based on 4K Ultra HD programming available from multi-channel video providers. Limited titles available. Requires a Genie HD DVR and a DIRECTV 4K Ready TV. Additional fees apply. Visit directv.com/4K for complete details.

The Best Sports!

A CHAMPION FOR ALL SEASONS.
No matter what game, no matter what season, DIRECTV has you covered.[2] No one has a better lineup of out-of-market sports packages:

SUNDAY TICKET NBA LEAGUE PASS NHL CENTER ICE MLB EXTRA INNINGS

Sports subscriptions sold separately.

All DIRECTV offers require a 24-month agreement.** Offers available through 12/31/15. Another offer will be available beginning 1/1/16. Credit card required (except in MA & PA). New approved customers only (lease required). Hardware available separately. Additional fees required. $19.95 Handling & Delivery fee may apply. Applicable use tax adjustment may apply on the retail value of the installation. Programming, pricing and offers are subject to change and may vary in certain markets. Some offers may not be available through all channels and in select areas.

SAVE $120 ONLY WHEN YOU CALL THIS DEDICATED NUMBER: 1-855-333-0068

When you order the SELECT™ Package or higher. 24-month agreement required.**

FX NETWORK WE CN SOAP TCM ion 3net PRIME Bloomberg tbs A&E TNT ESPN 3D life ESPNEWS food TVGN HLN SyFy HDNET MOVIES

All programming and pricing subject to change at any time. *$120 BILL CREDIT OFFER: New customer must sign up using the phone number provided (1-855-333-0068) and order a leased system (on approved credit). Upon activation of DIRECTV System and the SELECT Package or higher, customer will receive 12 nonrefundable/nontransferable credits of $10 each over 12 DIRECTV billing cycles, totaling $120. Commercial accounts/customers not eligible.
*BILL CREDIT/PROGRAMMING OFFER: IF BY THE END OF PROMOTIONAL PRICE PERIOD(S) CUSTOMER DOES NOT CONTACT DIRECTV TO CHANGE SERVICE THEN ALL SERVICES WILL AUTOMATICALLY CONTINUE AT THE THEN-PREVAILING RATES. Three free months of HBO, STARZ, SHOWTIME and Cinemax with SELECT through ULTIMATE Packages, a $152.97 value. LIMIT ONE PROGRAMMING OFFER PER ACCOUNT. Featured package/service names and current prices: FAMILY $29.99/mo.; SELECT $69.99/mo.; Advanced Receiver fee $15/mo. All pricing subject to change at any time. Account must be in "good standing" as determined by DIRECTV in its sole discretion to remain eligible for all offers. May not be combined with other DIRECTV offers, including refer-a-friend program.
**24-MONTH AGREEMENT; EARLY CANCELLATION WILL RESULT IN A FEE OF $20/MONTH FOR EACH REMAINING MONTH. Must maintain 24 consecutive months of any DIRECTV base programming package ($29.99/mo. or above) or any qualifying international service bundle. Advanced Receiver fee ($15/mo.) required for all HD DVRs. TiVo service fee ($5/mo.) required for TiVo HD DVR from DIRECTV lease. There is a fee of up to $6.50/mo. for each receiver and/or Genie Mini /DIRECTV Ready TV/Device on your account. NON-ACTIVATION CHARGE OF $150 PER RECEIVER MAY APPLY. ALL EQUIPMENT IS LEASED AND MUST BE RETURNED TO DIRECTV UPON CANCELLATION, OR UNRETURNED EQUIPMENT FEES APPLY. VISIT directv.com/legal OR CALL 1-800-DIRECTV FOR DETAILS. INSTALLATION: Standard professional installation in up to four rooms only. Custom installation extra.
DIRECTV ON DEMAND: Access to available DIRECTV On Demand programming is based on package selection. Actual number of shows and movies will vary. Additional fees apply for new releases. Some DIRECTV On Demand content requires an HD DVR (HR20 or later) or DVR (R22 or later), DIRECTV CINEMA Connection Kit and broadband Internet service with speeds of 750 Kbps or higher, and a network router with an available Ethernet port. Visit directv.com/movies for details.
1. Local channel eligibility based on service address. Not all networks available in HD in all markets. 2. Blackout restrictions and other conditions apply. Actual number of games varies by market. Professional and collegiate sports subscriptions sold separately. 3. Not all titles available in 1080p. To view programs in 1080p, the following are required: an HD DVR Receiver (model HR20 or higher), an HDMI cable connecting the receiver and the television, and a high-definition 1080p24 television. Not all models are compatible. 4. Dolby Digital 5.1 surround sound only available when provided by programmer. Equipment available separately. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. 8. Functionality varies by compatible device and location. Only select networks corresponding to your package selection are available for live streaming and may vary by location and device. Additional charges may apply. In-home live-streaming feature requires home-based Wi-Fi connection and Internet-connected HD DVR. Out-of-home viewing requires high-speed Internet connection. All functions and programming subject to change at any time. Visit directv.com/everywhere and directv.com/apps for a list of compatible devices (sold separately) and complete details. Data charges may apply. 9. To view programs in 4K HD, the following are required: a DIRECTV 4K Ready TV and a Genie HD DVR connected to the Internet. Two-room setup recommended. Additional and Advanced Receiver fees apply.
††UP TO $120 SAVINGS OFFER: DIRECTV customers who activate (or currently subscribe to) television services with SELECT Package or above and add qualifying service(s) from a preferred provider will automatically receive the following bill credits on their DIRECTV bill when services are ordered through DIRECTV: $10/mo. bill credit for 12 months ($5/mo. for 12 months with select providers) with activation of High Speed Internet and phone service. All accounts must remain in "good standing," as determined by DIRECTV in its sole discretion, or bill credits will cease. High Speed Internet and phone subject to availability; service not available in all areas. Eligibility based on service address and phone line. Internet and/or phone service provided by a preferred DIRECTV provider and billed separately. Prices vary depending on provider and are subject to change. Separate appointment for Internet installation may be required. Equipment may be required and sold separately. Start-up costs, taxes and other fees may apply. Computer system requirements vary by provider. Terms and conditions for selected Internet service provider apply. DIRECTV television service commitment required.
To access DIRECTV HD programming, HD equipment is required. Number of HD channels varies by package selected. ©2015 DIRECTV. DIRECTV and the Cyclone Design logo, GENIE, FAMILY, SELECT and DON'T JUST WATCH TV. DIRECTV, are trademarks of DIRECTV, LLC. All other trademarks and service marks are the property of their respective owners. HBO®, Cinemax® and related channels and service marks are the property of Home Box Office, Inc. STARZ® and related channels and service marks are the property of Starz Entertainment, LLC. SHOWTIME and related marks are trademarks of Showtime Networks Inc., a CBS Company.

SONY

4180215112

4-180-215-11(2)

Attention

ENGLISH

Preventing TV Tip-Over Accidents

The U.S. Consumer Product Safety Commission (CPSC) estimates that in 2005 at least 3,000 children younger than age 5 were treated in U.S. hospitals emergency rooms because of injuries associated with TV tip-overs. In addition, from 2000 through 2005, CPSC received reports of 36 TV tip-over deaths. More than 80 percent of all these deaths involved young children. The injuries and deaths frequently take place when kids climb onto, fall against or pull themselves up on shelves, bookcases, dressers, desks, chests and television stands. In some cases, televisions placed on top of furniture tip over and cause a child to suffer a traumatic and sometimes fatal injury.

Attention

FRANÇAIS

Éviter les accidents de renversement de téléviseur

La commission de surveillance des produits de consommation (CSPC) des É.-U. estime qu'en 2005 au moins 3 000 enfants de moins de cinq ans ont été traités dans les salles d'urgence des hôpitaux états-uniens pour des blessures associées à des renversements de téléviseurs. De plus, de 2000 à 2005, la CSPC a reçu des rapports de 36 décès causés par un renversement de téléviseur. Plus de 80 pour cent de ces décès impliquaient de jeunes enfants. Les blessures et les décès ont souvent lieu lorsque les enfants tombent contre, grimpent ou se hissent sur des tablettes, des bibliothèques, des commodes, des bureaux, des armoires et des supports de téléviseur. Dans certains cas, les téléviseurs placés sur des meubles se renversent et causent une blessure grave et parfois fatale à l'enfant.

Atención

ESPAÑOL

Prevención de accidentes por vuelco y caída del televisor

La Comisión de Seguridad de Productos de EE.UU. (CPSC) calcula que en el 2005 por lo menos 3,000 niños menores de 5 años recibieron tratamiento de emergencia en hospitales de Estados Unidos debido a las lesiones recibidas al volcarse un televisor. Asimismo, entre los años 2000 y 2005, la CPSC recibió informes de 36 muertes causadas por volcarse un televisor. Más del 80% de las muertes fueron de niños pequeños. Con frecuencia, las lesiones y muertes suceden cuando un niño se trepa a un televisor, cae sobre él o trata de subirse en repisas, roperos, escritorios o bases de televisor. En algunos casos, cuando se coloca un televisor encima de un mueble, éste puede volcarse y caer causando trauma físico y hasta la muerte en niños.

Watch Out!

Faites attention!

¡Cuidado!

The following safety tips are recommended to prevent furniture or TV tip-overs:

- Verify that television is placed only on furniture that is stable on its own. For added security it is recommended that you attach to the wall or anchor to the floor all entertainment units, TV stands, bookcases, shelving, and bureaus using appropriate hardware, such as brackets, screws, or toggles.
- Place the television on sturdy furniture appropriate for the size of the TV or on a low-rise base.
- Push the television as far back as possible.
- Place electrical cords and audio/visual cables out of a child's reach, and teach kids not to play with them.
- Remove items that might tempt kids to climb on or near the television, such as toys and remote controls, from top of the TV and furniture.

See the operating instruction for more information on how to secure the TV.

Les conseils de sécurité suivants sont recommandés pour éviter les renversements de meubles ou de téléviseurs :

- Assurez-vous que le téléviseur est placé seulement sur un meuble qui est stable par lui-même. Pour augmenter la sécurité, il est recommandé de fixer au mur ou au sol toutes les unités de divertissement, les supports de téléviseur, les bibliothèques, les tablettes et les bureaux au moyen de la quincaillerie appropriée, comme des supports, des vis ou des boulons à ailettes.
- Placez le téléviseur sur un meuble robuste approprié pour la taille du téléviseur ou sur une base basse.
- Poussez le téléviseur aussi loin que possible vers l'arrière.
- Placez les cordons électriques et les câbles audio/vidéo hors de la portée des enfants et montrez-leur de ne pas jouer avec eux.
- Retirez du dessus du téléviseur et des meubles les objets qui pourraient inciter les enfants à grimper sur ou près du téléviseur, comme des jouets ou des télécommandes.

Reportez-vous aux directives d'utilisation pour obtenir d'autres renseignements sur la façon de sécuriser le téléviseur.

A continuación se presentan algunos consejos de seguridad recomendados para prevenir el vuelco y la caída de televisores:

- Asegúrese de que el televisor solamente esté colocado sobre muebles que sean estables en sí. Para mayor seguridad, se recomienda que todas las unidades de entretenimiento, bases para televisor, libreros, repisas o burós se sujeten a la pared o al piso usando las ménsulas, tornillos o abrazaderas adecuadas.
- Coloque el televisor en un mueble sólido adecuado al tamaño del aparato o en una base que no sea alta.
- Coloque el televisor lo más atrás del mueble que sea posible.
- Coloque los cables eléctricos y del sistema audiovisual fuera del alcance de los niños y enséñeles a que no deben jugar con cables.
- Retire cualquier objeto como juguetes o controles remoto que esté encima del televisor o del mueble y que pudiera incitar a los niños a treparse en el televisor o cerca de él.

Consulte las instrucciones de funcionamiento para obtener más información sobre cómo asegurar el televisor.

© 2009 Sony Corporation Printed in U.S.A.

ENGLISH

Does your picture quality seem poor?
Do you have a cable or satellite box?

Factors other than your TV can affect picture quality.

1) Cable or Satellite Set-Top Box (STB)

Request an HD STB from your service provider and review your STB settings.

You may need to adjust your STB audio and picture settings, otherwise you may experience issues such as: Poor picture quality, black bars on the top or sides of the screen, no audio, empty black boxes on the screen.

Contact your service provider if you have any questions on STB usage.

2) Broadcaster

The broadcaster controls the quality of the program. Some programs are broadcast in High Definition (HD), while other programs are broadcast in Standard Definition (SD), even on HD stations.

HD broadcast
Crisp, clear picture

SD broadcast
Fuzzy picture, often with black bars

Type of content stations can broadcast:

	SD Station	HD Station
SD Content	X	X
HD Content		X
Both HD & SD content		X

SD content on HD channels does not create an HD picture!

3) Original Recording Quality

The quality of the picture you see also depends on the type of camera used when the original recording was made.

FRANÇAIS

Est-ce que la qualité de votre image semble mauvaise?
Est-ce que vous avez le câble ou un satellite?

Facteurs autres que votre téléviseur pouvant affecter la qualité de l'image.

1) Décodeur de câble ou satellite

Demandez un décodeur HD à votre fournisseur de service et examinez les réglages de votre décodeur.

Vous devrez ajuster les réglages de son et d'image de votre décodeur, sinon vous pourriez constater les problèmes suivants : mauvaise qualité d'image, barres noires dans le haut ou les côtés de l'écran, pas de son, boîtes noires vides à l'écran.

Communiquez avec votre fournisseur de service si vous avez des questions au sujet de l'utilisation du décodeur.

2) Télédiffuseur

Le télédiffuseur contrôle la qualité de l'émission.
Certaines émissions sont télédiffusées en haute définition (HD), tandis que d'autres sont télédiffusées en définition standard (SD), même sur des postes HD.

Télédiffusion HD
Image claire, précise

Télédiffusion SD
Image floue, souvent avec des barres noires

Type de contenu que les stations peuvent diffuser :

	Stations SD	Stations HD
Contenu SD	X	X
Contenu HD		X
Contenu HD et SD		X

Le contenu SD sur des canaux HD ne crée pas une image HD!

3) Qualité de l'enregistrement initial

La qualité de l'image que vous voyez dépend aussi du type de caméra utilisé lors de l'enregistrement initial.

ESPAÑOL

¿La calidad de la imagen no es óptima?
¿Tiene un receptor de cable o satélite?

Existen factores aparte del televisor que pueden afectar la calidad de la imagen.

1) Receptores de cable o satélite (Set-Top Box o STB)

Solicite un receptor de alta definición (HD) de la compañía que le ofrece el servicio y cheque la configuración del receptor.

Es posible que necesite ajustar la configuración de audio e imagen de su receptor, de no ser así, podría observar lo siguiente: mala calidad de la imagen, barras negras en la parte superior o en los costados de la pantalla, falta de audio, recuadros negros vacíos en la pantalla.

Comuníquese con la compañía proveedora de servicio si tiene alguna pregunta sobre el uso de su receptor.

2) Cadenas transmisoras

La cadena transmisora controla la calidad del programa. Algunos programas se transmiten en alta definición (HD), mientras que otros se transmite en definición estándar (SD) o hasta en estaciones de alta definición.

Transmisión en Alta Definición (HD)
Imagen clara y nítida

Transmisión en Definición Estándar (SD)
Imagen borrosa, con frecuencia aparecen barras negras

Tipo de contenido que las estaciones pueden transmitir:

	Estación SD	Estación HD
Contenido SD	X	X
Contenido HD		X
Contenido tanto HD como SD		X

¡El contenido SD en canales HD no crea una imagen en alta definición!

3) Calidad original de la filmación

La calidad de la imagen que ve también depende del tipo de cámara que se usó cuando se hizo la filmación original.

SONY

Consumer Warranty

4-460-228-21

Sony of Canada Ltd. (hereinafter referred to as "Sony") hereby warrants, subject to the terms and conditions herein set forth, this product against defects in material and workmanship during the specified warranty period. In the event of a defect of material or workmanship during the specified warranty period, Sony will, without charge for parts or labour, either repair the product, effecting all necessary parts replacements with either new or refurbished parts, or at Sony's sole discretion, replace the product with a refurbished product of equal or better quality. **This limited warranty is valid only in Canada.**

The Warranty Period:
1. Labour: ONE YEAR from the date of original purchase at retail.
2. Parts: ONE YEAR (thermal head and projector lamp: 90 days) from the date of original purchase at retail.
3. Commercial or Rental Use: NINETY DAYS parts and labour from the date of original purchase.

Void or limited warranty:
This limited warranty is void if the product has been previously altered, modified, repaired or serviced by anyone other than the service facilities authorized by Sony, if the serial number on the product has been altered or removed, or if the product has been subject to accident, misuse, abuse, acts of God or operated contrary to the instructions contained in the Owner's Manual. This product is not intended for commercial or rental use. Should this product be used for commercial or rental use, Sony's standard ninety day commercial warranty will apply. The opinion of Sony with respect to these matters shall be final.

Proper Delivery for Service:
The product must be shipped, freight prepaid, or delivered to one of the nearest Sony service facilities in Canada in either its original package or similar package affording an equal degree of protection, and with instructions indicating a location within Canada to which the product should be returned. The repaired product will be returned to customer freight prepaid. Prior to shipping or delivering the product for repair, all accessories, media and other attachments should be removed from the product and all data and software must be backed up. It is likely that stored data and software will be lost, corrupted or reformatted in the course of service and Sony will not be liable for lost, corrupted or reformatted data or software. If more than the product is sent for repair, all items must be listed individually on the packing slip for the shipping documentation. Sony shall have no liability whatsoever for loss or damage to items that are not listed on the shipping documentation. Defective accessories should be returned to Sony as a separate repair item.

On-site service for televisions of certain dimensions may be available to a customer living within a 50km radius of an authorized Sony service facility, provided the residence can be accessed by an on-road service vehicle. Please go to www.fastracservice.ca or call 1-877-899-7669 to determine if on-site service applies to your television and residential location.

Proof of Original Purchase:
This limited warranty applies to the product from the date of original purchase. Therefore, the owner must furnish proof of original purchase at retail for the consumer warranty. For the commercial warranty, the owner must furnish proof of original purchase at retail or from a distributor. For subsequent purchasers, the date the first user acquired the product will apply as the original purchase.

This limited warranty does not extend to cosmetic damage, broken or damaged casing, accessories, exposed antennas and styluses, consumable items (such as batteries) provided with the product, parts wearing out due to normal wear and tear, damage caused by operation of the product with incompatible equipment or attachments, software issues (consult the End-User License Agreement for software terms and conditions, otherwise software is provided "AS IS") or to products sold "AS IS". This limited warranty does not cover regular product maintenance such as cleaning, lubrication or evaluation.

No Other Warranties; Limitation and Exclusion of Liability:

EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ALL OTHER WARRANTIES AND CONDITIONS, EXPRESS OR IMPLIED, AND WHETHER ARISING BY LAW, BY STATUTE, BY COURSE OF DEALING OR USAGE OF TRADE, INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, MERCHANTABLE QUALITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. UNDER NO CIRCUMSTANCES SHALL SONY BE LIABLE FOR AN AMOUNT GREATER THAN THE ACTUAL PURCHASE PRICE OF THE UNIT, FOR ANY LOSS, DAMAGE OR CORRUPTION OF DATA, OR FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES SUSTAINED IN CONNECTION WITH SAID UNIT AND SONY NEITHER ASSUMES NOR AUTHORIZES ANY REPRESENTATIVE OR OTHER PERSON TO ASSUME FOR IT ANY OBLIGATION OR LIABLILITY OTHER THAN SUCH AS IS EXPRESSLY SET FORTH HEREIN.

Product Registration and Customer Support:
Thank you for choosing a Sony product. At Sony, we strive to create products of the highest quality to enhance your experience and enjoyment. To provide the best support for your product, we request that you complete a product registration form at www.Sony.ca/registration within ninety (90) days of purchase.

For service assistance, product information, product registration or to locate an authorized service facility please go to www.fastracservice.ca, or call: 1-877-899-7669.

For information about a Sony Care Extended Warranty, please call 1-800-773-9667.

For online product support and updates at any time, please visit: www.sony.ca/support, or call the Sony Customer Information Centre at 1-877-899-7669.

Printed in U.S.A.

SONY®

Garantie protégeant les consommateurs

Sony du Canada ltée (ci-après désignée Sony), sous réserve des modalités et conditions indiquées aux présentes, garantit le présent produit contre tout défaut de fabrication ou de matériaux pour la période de garantie spécifiée. Si un défaut de fabrication ou de matériaux survient pendant la période de garantie spécifiée, Sony veillera à réparer le produit en y effectuant tous les remplacements de pièces nécessaires par des pièces neuves ou remises à neuf et ce, sans frais de pièces ou de main-d'œuvre. À se seule discrétion, Sony peut aussi choisir de remplacer le produit par un produit réusiné de qualité égale ou supérieure. **La présente garantie n'est valide qu'au Canada.**

La période de garantie :
1. Main-d'œuvre : UN AN à compter de la date d'achat originelle au détail.
2. Pièces : UN AN (90 jours pour têtes thermiques et lampes de projecteur) à compter de la date d'achat originelle au détail.
3. Usage commercial ou locatif : QUATRE-VINGT-DIX jours sur pièces et main-d'oeuvre à compter de la date d'achat originelle.

Garantie nulle ou limitée :
La présente garantie limitée est nulle si le produit a été antérieurement transformé, modifié, réparé ou entretenu par quiconque autre que les installations de service autorisées par Sony, si le numéro de série du produit a été modifié ou enlevé, ou si le produit a fait l'objet d'un accident, d'un mauvais usage, d'un abus, d'une calamité naturelle, ou s'il a été utilisé contrairement aux instructions du manuel du propriétaire. Le présent produit n'est pas destiné à l'usage commercial ou locatif. Advenant que le produit soit utilisé à des fins commerciales ou locatives, la garantie commerciale de quatre-vingt-dix de Sony s'appliquera. L'opinion de Sony à cet effet est définitive.

Livraison appropriée pour entretien :
Le produit doit être expédié, port prépayé, ou livré à l'une des installations de service Sony les plus rapprochées au Canada, soit dans son emballage d'origine, soit dans un emballage similaire offrant un degré de protection comparable, et accompagné d'instructions indiquant l'endroit au Canada où le produit doit être retourné. Le produit réparé sera retourné au client port payé. Avant d'expédier ou de livrer le produit pour réparation, tous les accessoires, supports et autres périphériques doivent être retirés du produit, et le consommateur doit effectuer une copie de sécurité de toutes les données et de tous les logiciels. Il est plus que probable que les données et logiciels seront perdus, corrompus ou reformatés lors de l'entretien, et Sony n'est pas responsable des données ou logiciels perdus, corrompus ou reformatés. Si plus d'un produit est envoyé pour réparation, tous les articles doivent être énumérés individuellement sur le bordereau d'expédition pour la documentation d'expédition. Sony n'est nullement responsable de la perte ou des dommages aux articles qui ne figurent pas sur la documentation d'expédition. Les accessoires défectueux doivent être retournés à Sony comme articles à réparer distincts.

Le service à domicile pour les téléviseurs de certaines dimensions peut être disponible à tout client qui habite dans un rayon de 50 km d'une installation de service autorisée Sony, et dont la résidence est accessible à un véhicule de service routier. Rendez-vous à www.fastracservice.ca ou composez le 1-877-899-7669 afin de déterminer si le service à domicile s'applique à votre téléviseur et à l'emplacement de votre résidence.

Preuve de date d'achat :
La présente garantie limitée s'applique au produit à compter de la date d'achat originelle au détail. Par conséquent, le propriétaire doit présenter une preuve de date d'achat originelle au détail pour se prévaloir de la présente garantie. Pour la garantie commerciale, le propriétaire doit présenter une preuve de date d'achat originelle au détail ou d'un distributeur. En ce qui a trait aux acheteurs subséquents, la date à laquelle le premier usager a acquis le produit s'appliquera comme date d'achat originelle.

La présente garantie limitée ne couvre pas les dommages cosmétiques, les boîtiers brisés ou endommagés, les accessoires, les antennes et stylets exposés, les articles consomptibles (comme les piles) fournis avec le produit, la défaillance de pièces découlant de leur usure normale, les dommages causés par l'opération du produit avec de l'équipement ou des accessoires non compatibles, les problèmes de logiciels (consultez l'entente de licence d'usager pour connaître les modalités afférentes aux logiciels; sinon, les logiciels sont fournis « TELS QUELS »), ou les produits vendus « TELS QUELS ». La présente garantie limitée ne couvre pas l'entretien régulier du produit comme le nettoyage, la lubrification ou les vérifications.

Aucune autre garantie; limite et exclusion de responsabilité :
SAUF DANS LA MESURE OÙ LA LOI APPLICABLE L'INTERDIT, TOUTES LES AUTRES GARANTIES ET CONDITIONS, EXPRESSES OU IMPLICITES, RELEVANT OU NON D'UNE LOI, D'UN ACTE LÉGISLATIF, D'HABITUDES COMMERCIALES ÉTABLIES OU D'USAGES DU COMMERCE, Y COMPRIS, SANS S'Y LIMITER, TOUTE GARANTIE IMPLICITE DE QUALITÉ MARCHANDE OU DE L'ADAPTABILITÉ À UNE FIN PARTICULIÈRE, SONT DÉSAVOUÉES. SONY NE SAURAIT EN AUCUN CAS ÊTRE RESPONSABLE D'UN MONTANT SUPÉRIEUR AU PRIX RÉEL D'ACHAT DU PRODUIT; ET SONY NE SAURAIT EN AUCUN CAS ÊTRE RESPONSABLE DE PERTES, DOMMAGES OU CORRUPTION DE DONNÉES, NI DE DOMMAGES SPÉCIAUX, ACCESSOIRES OU CONSÉCUTIFS SUBIS RELATIVEMENT AU PRODUIT. SONY N'ASSUME NI N'AUTORISE AUCUN REPRÉSENTANT OU QUICONQUE À ASSUMER EN SON NOM UNE OBLIGATION OU RESPONSABILITÉ AUTRE QUE CELLES QUI SONT EXPRESSÉMENT DÉCRITES AUX PRÉSENTES.

Enregistrement du produit et soutien de la clientèle :
Nous vous remercions d'avoir choisi un produit Sony. À Sony, nous nous efforçons de créer des produits de la plus haute qualité afin de renforcer votre expérience et votre satisfaction. Afin d'assurer le meilleur soutien qui soit pour votre produit, nous vous demandons de remplir un formulaire d'enregistrement à www.Sony.ca/enregistrement et ce, dans les quatre-vingt-dix (90) jours suivant la date d'achat.

Pour obtenir de l'aide concernant le service, des renseignements sur le produit, l'enregistrement du produit, ou pour localiser une installation de service autorisée, visitez www.fastracservice.ca ou composez le 1-877-899-7669.

Pour obtenir des renseignements concernant la garantie prolongée Sony Care, composez 1-800-773-9667.

Pour obtenir un soutien de produit en ligne et des mises à jour en tout temps, visitez www.sony.ca/fr/support, ou appelez le Centre d'information de la clientèle de Sony au 1-877-899-7669.

SONY

LCD Television 12M

LIMITED WARRANTY (U.S. ONLY)

SONY ELECTRONICS INC. ("SONY") warrants this product against defects in material or workmanship for the original and any subsequent end user owner(s) ("You" or "Your") for the time periods and as set forth below when purchased directly from Sony or a Sony Retailer. Under this Limited Warranty, SONY will, at its option, (i) repair the product using new or refurbished parts or (ii) replace the product with a new or refurbished product. "Refurbished" means a product or part that has been returned to its original specifications. **These are Your exclusive remedies**. SONY does not warrant that the operation of the product will be uninterrupted or error-free.

Term: One (1) year from the original date of purchase of the product (or ninety (90) days from original date of purchase for commercial use). This Limited Warranty is transferable. However, any transfer of this product does not extend the term. **A copy of the dated receipt from Sony or a Sony Retailer or bill of sale from the original end user purchase is required to determine coverage. Online auction confirmations are not accepted for warranty verification**.

Product Coverage: Only the hardware components packaged with the Product are covered. Technical assistance for hardware or software usage and any software products are not covered. Any software is provided "AS IS" unless expressly provided for in any enclosed software Limited Warranty. When a product or part is exchanged, the original item becomes SONY's property. Any replacement product provided under this limited warranty may vary in the color and/or cosmetic design from the original product and may not include any original engraving or similar customization.

Instructions: You must contact SONY or an authorized servicer prior to returning any product for warranty service. SONY will not reimburse You for service performed by others. Unless otherwise instructed by SONY or an authorized servicer, You must deliver the product, freight prepaid, in either its original packaging or packaging affording an equal degree of protection to the facility specified by SONY.

For specific instructions on obtaining warranty service for your product,

Visit SONY's Web Site: www.sony.com/support
Or call the Sony Customer Information Service Center
1-800-222-SONY (7669)
For an accessory or part not available from Your authorized dealer, call:
1-800-488-SONY (7669)

If You purchased an extended service plan, please refer to the service plan for the coverage, duration and terms of service as they are not governed by this Limited Warranty.

Repair/Replacement Warranty: This Limited Warranty shall apply to any repair, replacement part or replacement product for the remainder of the original Limited Warranty period or for ninety (90) days, whichever is longer.

(See reverse for additional terms and conditions.)

Printed in USA

Limitations: This Limited Warranty only covers product issues caused by defects in material or workmanship during ordinary consumer use; it does not cover product issues caused by any other reason, including but not limited to, (i) product issues due to acts of God or nature; (ii) misuse; (iii) accidental damage, including but not limited to, contact with liquid, extreme heat or foreign material; (iv) customer instruction, installation, set up adjustments or signal reception issues; (v) limitations of technology; (vi) modification of or to any part of the SONY product, including the antenna; (vii) cosmetic damage; (viii) use or installation inconsistent with the owner's manual and other SONY instruction; (ix) use of parts or peripherals not recommended by SONY; damage caused by servicing not authorized by SONY or third-party calibration; or (x) damage caused by computer or internet viruses, bugs, worms, Trojan Horses or cancelbots; or products purchased from other than Sony or a Sony Retailer. To determine if a retailer is part of the Sony Retailer Network, please contact Sony's Customer Service Call Center or go to **www.sonystyle.com/retailernetwork**. This Limited Warranty does not cover up to .01% pixel outages (small dot picture elements that are dark or incorrectly illuminated). A Display contains hundreds of thousands of individual pixels. Displays typically contain a small number of pixels that do not function normally.

This Limited Warranty does not cover SONY products sold "AS IS", "Open Box", "WITH ALL FAULTS" or similar notations and does not cover consumables (such as fuses or disposable batteries). SONY will not replace missing components from any package purchased "AS IS", "Open Box" or through an online auction. This Limited Warranty is invalid if the factory-applied serial number has been altered or removed from the product. This Limited Warranty is valid only on products purchased and located in the United States (excluding territories) or United States military facilities.
SONY specifically does not represent that it will be able to repair any product under this warranty or make a product exchange without risk to or loss of programs or data.

LIMITATION ON DAMAGES: SONY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT NOR SHALL RECOVERY OF ANY KIND AGAINST SONY BE GREATER THAN THE PURCHASE PRICE OF THE PRODUCT.

DURATION OF IMPLIED WARRANTIES: EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. WITH RESPECT TO COMMERCIAL PURCHASERS, ALL IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE EXCLUDED AND DISCLAIMED.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to You. This Limited Warranty gives You specific legal rights and You may have other rights which vary from state to state.

No Sony reseller, agent or employee is authorized to make any modification, extension or addition to this warranty.

445201401

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages